Manualslib.com - The Global Manuals Library

SHARP 21GT-22 SERVICE MANUAL

Table of Contents

Table of Contents
service manual
sharp corporation
SOLID STATE DEVICE BASE DIAGRAM
WAVEFORMS
CHASSIS LAYOUT
BLOCK DIAGRAM
DESCRIPTION OF SCHEMATIC DIAGRAM
SCHEMATIC DIAGRAM
MAIN UNIT
CRT UNIT
HEADPHONE UNIT
MONO BILINGUAL UNIT
PRINTED WIRING BOARD ASSEMBLIES
HEADPHONE UNIT
REPLACEMENT PARTS LIST
Ë CABINET PARTS
PACKING OF THE SET
Other ManualsLib Projects

SHARP SERVICE MANUAL

SX2U121GT-22/

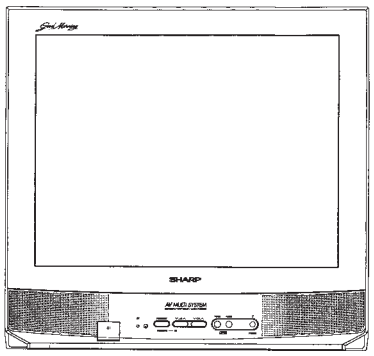

COLOUR TELEVISION

Chassis No. GA-1

MODEL 21GT-22

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

FEATURES

- PAL B/G
- NTSC(AV Thru)
- Full Auto Channel Preset and Auto Channel Skip
- 100 CH Program Memory
- CATV (Hyper Band) Ready
- AVL (Sound Keeper) Function
- High Contrast Picture (Black Stretch Circuit)
- ON Timer/Sleep Timer/Reminder Timer
- Favourite Channel
- Blue Back Noise Mute
- Front AV In (Front AV Priority)
- Rear AV In/Out Terminals
- Colour-Comb Filter (NTSC AV In)
- Hotel Mode
- Front Headphone Jack
- English/Thai Language OSD
- Mono Bilingual

CONTENTS

	Page
• SPECIFICATIONS	2
• IMPORTANT SERVICE NOTES	2
• ADJUSTMENT PRECAUTIONS	3
• MEMORY MAP	11
• GA1 HOTEL MODE APPLICATION	15
• TROUBLE SHOOTING TABLE	15
• SOLID STATE DEVICE BASE DIAGRAM	18
• WAVEFORMS	19
• CHASSIS LAYOUT	20
• BLOCK DIAGRAM	21
• DESCRIPTION OF SCHEMATIC DIAGRAM	25
• SCHEMATIC DIAGRAM	
■ MAIN UNIT	26
■ CRT UNIT	28
■ HEADPHONE UNIT	28
■ MONO BILINGUAL UNIT	29
• PRINTED WIRING BOARD ASSEMBLIES	30
• REPLACEMENT PARTS LIST	
■ ELECTRICAL PARTS	
MAIN UNIT	36
CRT UNIT	39
HEADPHONE UNIT	39
MONO BILINGUAL UNIT	39
■ SUPPLIED ACCESSORIES	40
■ PACKING PARTS	40
■ CABINET PARTS	41
• PACKING OF THE SET	42

WARNING

The chassis in this receiver is partially hot. Use an isolation transformer between the line cord plug and power receptacle, when servicing this chassis. To prevent electric shock, do not remove cover. No user – serviceable parts inside. Refer servicing to qualified service personnel.

SHARP CORPORATION

SPECIFICATIONS

Convergence ..... Self Converging System
Focus ..... Electrostatic Focus High Bi-Potential

Sweep Deflection ..... Magnetic
Intermediate Frequencies
  Picture IF Carrier ..... 38.9 MHz
  Sound IF Carrier Frequency
    5.74 MHz ..... 33.16 MHz
    5.5 MHz ..... 33.4 MHz
  Colour Sub-Carrier Frequency ..... 34.47 MHz

Power Input ..... AC110 - 240V, 50/60 Hz
Power Consumption ..... 84 W

Audio Power Output Rating ..... 5.0 W (at Max.)

Speaker
  Size ..... 5 × 9 cm Elliptic (2 pcs)
  Voice Coil Impedance ..... 16 ohms at 400 Hz

Aerial Input Impedance
  VHF/UHF ..... 75 ohm Unbalanced

Receiving Channels (PAL-B/G)
- VHF ..... E2 thru E12
- UHF ..... E21 thru E69

Receiving Frequency
- VHF-Channels ..... 48.25 thru 463.25 MHz
- UHF-Channels ..... 471.25 thru 863.25 MHz

Dimensions ..... Width: 506.5 mm
Height: 476.0 mm
Depth: 477.5 mm
Weight (Approx.): 20.5 kg

Cabinet Material ..... All Plastics

Specifications are subject to change without prior notice.

IMPORTANT SERVICE NOTES

Maintenance and repair of this receiver should be done by qualified service personnel only.

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove static charge from it by connecting a 10k ohm Resistor in series with an insulated wire (such as a test probe) between picture tube dag and 2nd anode lead. (AC line cord should be disconnected from AC outlet.)

1. **Picture tube in this receiver employs integral implosion protection.**
2. **Replace with tube of the same type number for continued safety.**
3. **Do not lift picture tube by the neck.**
4. **Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage completely**

X-RAY

This receiver is designed so that any X-Ray radiation is kept to an absolute minimum. Since certain malfunctions or servicing may produce potentially hazardous radiation with prolonged exposure at close range, the following precautions should be observed:

1. **When repairing the circuit, be sure not to increase the high voltage to more than 28.0 kV (at beam 0**

ADJUSTMENT PRECAUTIONS

This model's setting are adjusted in two different ways: though the I²C bus control and in the conventional analog manner. The adjustments via the I²C bus control include preset-only items and variable data.

CAUTION : Make sure TV Set is in "Normal Condition" before switch to Service Mode for adjustment.

1. Setting the service mode by the microprocessor.

① Make a short-circuit 137 and 138 for a second and release to switch to the service mode position and the microprocessor is in input mode. (Adjustment through the I²C bus control). (Use JWS Key to set as well).
② Press the CH DOWN / UP key on the remote controller to get ready to select the mode one by one.
③ Press the CH DOWN / UP key on the remote controller to select the modes reversibly one by one.
④ Using the VOLUME UP/ DOWN key on the remote controller, the data can be modified.
⑤ Make a short-circuit 137 and 138 for a second and release to switch to the normal mode (OFF) position and the microprocessor is in out of the service mode.

2. Factory Presetting.

① Make a short-circuit JA137 and JA138, then turn ON the main power and release to switch to Service Mode. Initial values are automatically preset, only when a new EEPROM is used (Judge with the first 4 bytes).
② The initial data are preset as listed in pages 4-6.
③ Make sure the data need modify or not (Initial data).

Note: Once the chassis has been assembly together and ready to be POWER ON for the FIRST TIME, make sure to make a short-circuit 137 and 138 switch to the service mode position first and then turn on the main power switch. (See 2-1 above).

Precaution: If haven't done this initiation, it may possibly generate excessive Beam current.

3. For reference please check with memory map (GA1 Series type RH-iX3368CE)

■ SERVICE MODE

(1) In the Service Mode, Key is used to select the mode in the following order.

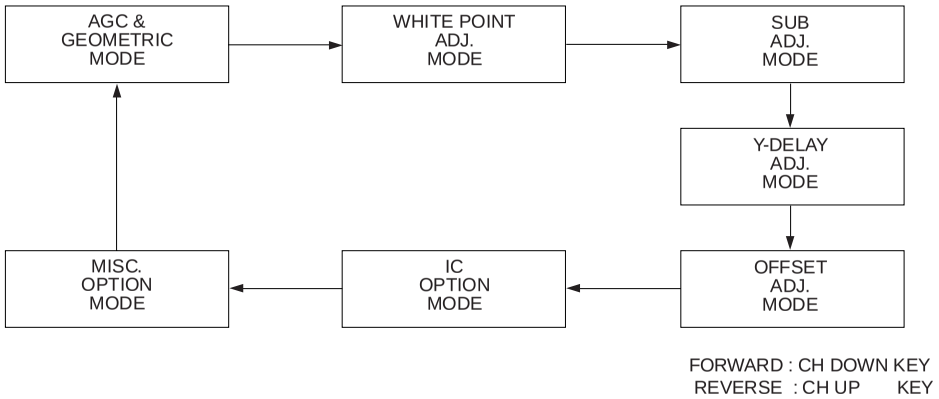

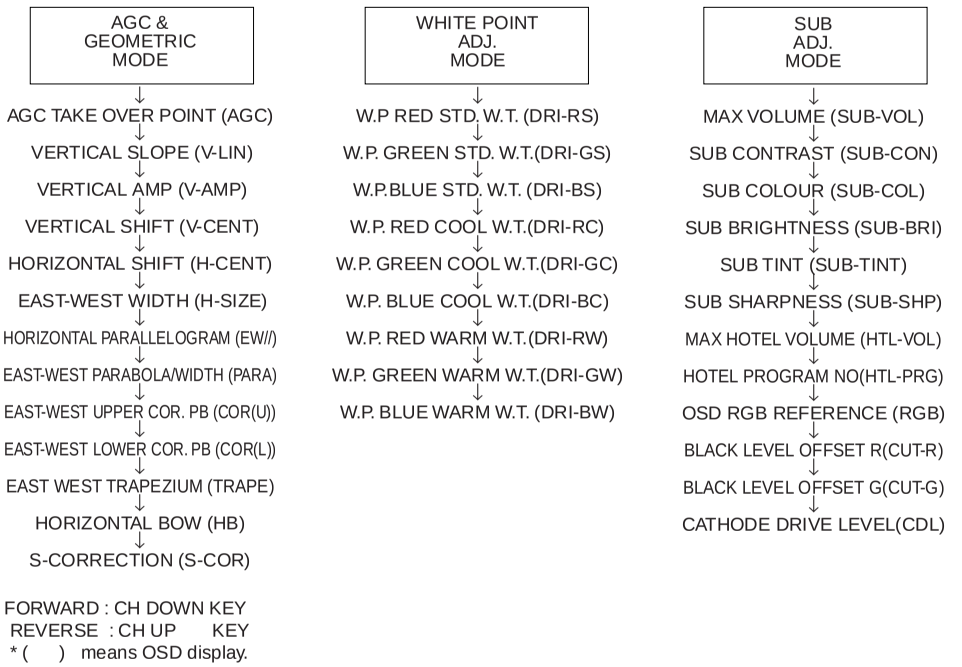

Y-DELAY ADJ. MODE
Y-D TIME FOR PAL (TV) (DL-PT)
Y-D TIME FOR SECAM (TV) (DL-ST)
Y-D TIME FOR N358 (TV) (DL-3T)
Y-D TIME FOR N443 (TV) (DL-4T)
Y-D TIME FOR B/W (TV) (DL-TV)
Y-D TIME FOR PAL (AV) (DL-PA)
Y-D TIME FOR SECAM (AV) (DL-SA)
Y-D TIME FOR N358 (AV) (DL-3A)
Y-D TIME FOR N443(AV) (DL-4A)
Y-D TIME FOR B/W (AV) (DL-AV)
*(Y-D : Y-DELAY)
OFFSET ADJ. MODE
COLOUR OFFSET (PAL) (COL-OP)
COLOUR OFFSET (SECAM) (COL-OS)
COLOUR OFFSET (NTSC358) (COL-O3)
COLOUR OFFSET (NTSC443) (COL-O4)
SHARPNESS OFFSET (PAL) (SHP-OP)
SHARPNESS OFFSET (SECAM) (SHP-OS)
SHARPNESS OFFSET (NTSC358) (SHP-O3)
SHARPNESS OFFSET (NTSC443) (SHP-O4)
IC OPTION MODE
VERTICAL SCAN DISABLE(VSD)
BLACK STRETCH (BKS)
AUTO VOLUME LEVELING(AVL)
FAST FILTER IF-PLL(FFI)
ENABLE VERTICAL GUARD (EVG)
EHT TRACKING MODE (EHT)
OVERSCAN SWITCH OFF(OSO)
AUTO COLOUR LIMIT(ACL)
FORCED COLOUR LIMIT(FCO)
MISC. OPTION MODE
SOUND SYSTEM M (S-M)
SOUND SYSTEM DK (S-DK)
SOUND SYSTEM I (S-I)
SOUND SYSTEM BG (S-BG)
PLAYBACK SECAM (P-SECAM)
FE (RF) NTSC 3.58 (F-N358)
FE (RF) NTSC 4.43 (F-N443)
FE (RF) SECAM (F-SECAM)
VIDEO MUTE AT IDENT LOSS (VMI)
VIDEO MUTE AT PROGRAM /SOURCE CHANGE (VMC)
HOTEL MODE (HTL)
REDUCED FM DEMODULATION GAIN FOR BTSC SIGNAL (BTSC)
A
A
NUMBER OF EXT AV SOURCE (AV)
FM WINDOW SELECTION (FMWS)
SOUND MUTE BIT 0 (SM0)
SOUND MUTE BIT 1 (SM1)
THAI LANGUAGE (THA)
ARABIC LANGUAGE (ARA)
MALAY LANGUAGE (MAL)
CHINESE LANGUAGE (CHI)
FRENCH LANGUAGE (FRE)
RUSSIAN LANGUAGE (RUS)
FORCED V-SYNC SLICING LEVEL(FSL)
SYNC OF OSD (HP2)
TUNER SELECTION (CPT)
B
B
BILINGUAL(BIL)
IF AGC SPEED BIT 0 (AGC0)
IF AGC SPEED BIT 1 (AGC1)
FOA Time Constant-RF (FOA-FE)
FOB Time Constant-RF (FOB-FE)
FOA Time Constant-AV (FOA-AV)
FOB Time Constant-AV (FOB-AV)
LED BLINK SPEED (LED-F)
VOLUME CONTROL TABLE (MSA)
OUTPUT VERTICAL GUARD (NDF)

Direct Key-in for Service Item in Service Mode.

RC COMMAND	SERVICE-ITEM
FUNCTION	AGC
CONTRAST DOWN	V-LIN
COLOUR DOWN	V-AMP
BRIGHTNESS DOWN	V-CENT
TINT DOWN	H-CENT
SHARPNESS DOWN	EW / /
SYSTEM	HB
BLUEBACK	S-COR
TIMER	SUB-VOL
CONTRAST UP	SUB-CON
COLOUR UP	SUB-COL
BRIGHTNESS UP	SUB-BRI
TINT UP	SUB TINT
SHARPNESS UP	SUB-SHP
CHANNEL 1	DRI-GS
CHANNEL 4	DRI-BS
CHANNEL 7	CUT-R
CHANNEL FLASHBACK	CUT-G

After short JA137 & 138, and turn on the main power switch, read data from E²PROM address 00H ~ 03H, and compare to the list below, if different, initialize the E²PROM.

Address	:	Data	Address	:	Data
00H	:	55H	02H	:	43H
01H	:	4FH	03H	:	A1H

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ	REMARK
AGC TAKE OVER POINT	AGC	0~63	14	ADJ	
VERTICAL SLOPE	V-LIN	0~63	32	ADJ	
VERTICAL AMPLITUDE	V-AMP	0~63	32	ADJ	
VERTICAL SHIFT	V-CENT	0~63	32	ADJ	
HORIZONTAL SHIFT	H-CENT	0~63	32	ADJ	
EAST-WEST WIDTH	H-SIZE	0~63	32	*FIX	
HORIZONTAL PARALLELOGRAM	EW//	0~63	32	*FIX	
EAST-WEST PARABOLA/WIDTH	PARA	0~63	32	*FIX	
EAST-WEST UPPER CORNER PARABOLA	COR (U)	0~63	32	*FIX	
EAST-WEST LOWER CORNER PARABOLA	COR (L)	0~63	32	*FIX	
EAST-WEST TRAPEZIUM	TRAPE	0~63	32	*FIX	
HORIZONTAL BOW	HB	0~63	32	*FIX	
S-CORRECTION	S-COR	0~63	0	ADJ	*3
WHITE POINT RED STD WHITE TEMP	DRI-RS	0~63	32	*FIX	
WHITE POINT GREEN STD WHITE TEMP	DRI-GS	0~63	32	ADJ	
WHITE POINT BLUE STD WHITE TEMP	DRI-BS	0~63	32	ADJ	
WHITE POINT RED COOL WHITE TEMP	DRI-RC	0~63	25	*FIX	
WHITE POINT GREEN COOL WHITE TEMP	DRI-GC	0~63	32	ADJ	(DRI-GS)- 7 DATA
WHITE POINT BLUE COOL WHITE TEMP	DRI-BC	0~63	32	ADJ	SAME AS (DRI-BS) DATA
WHITE POINT RED WARM WHITE TEMP	DRI-RW	0~63	32	*FIX	
WHITE POINT GREEN WARM WHITE TEMP	DRI-GW	0~63	32	ADJ	(DRI-GS)-7 DATA
WHITE POINT BLUE WARM WHITE TEMP	DRI-BW	0~63	32	ADJ	(DRI-BS)-7 DATA
MAX VOLUME	SUB-VOL	0~63	63	*FIX	
SUB CONTRAST	SUB-CON	0~63	63	*FIX	
SUB COLOUR	SUB-COL	0~63	32	ADJ	*4
SUB BRIGHTNESS	SUB-BRI	0~63	32	ADJ	
SUB TINT	SUB-TINT	0~63	32	ADJ	
SUB SHARPNESS	SUB-SHP	0~63	32 (20)	*FIX	
MAX HOTEL VOLUME	HTL-VOL	0~63	32	*FIX	
HOTEL PROGRAM NUMBER	HTL-PRG	0~99 OR>99FOR NONE	255	*FIX	
OSD RGB REFERENCE	RGB	0~15	15	*FIX	
BLACK LEVEL OFF-SET R	CUT-R	0~63	32	ADJ	
BLACK LEVEL OFF-SET G	CUT-G	0~63	32	ADJ	
CATHODE DRIVE LEVEL	CDL	0~15	0	ADJ	*2
Y-DELAY TIME FOR PAL(TV) [YD]	DL-PT	0~15	12	*FIX	
Y-DELAY TIME FOR SECAM(TV) [YD]	DL-ST	0~15	15	*FIX	
Y-DELAY TIME FOR N358 (TV) [YD]	DL-3T	0~15	12	*FIX	
Y-DELAY TIME FOR N443 (TV) [YD]	DL-4T	0~15	12	*FIX	
Y-DELAY TIME FOR B/W (TV) [YD]	DL-TV	0~15	12	*FIX	
Y-DELAY TIME FOR PAL (AV) [YD]	DL-PA	0~15	12	*FIX	
Y-DELAY TIME FOR SECAM (AV) [YD]	DL-SA	0~15	15	*FIX	
Y-DELAY TIME FOR N358 (AV) [YD]	DL-3A	0~15	12	*FIX	
Y-DELAY TIME FOR N443 (AV) [YD]	DL-4A	0~15	12	*FIX	
Y-DELAY TIME FOR B/W (AV) [YD]	DL-AV	0~15	12	*FIX	
COLOUR OFFSET (PAL)	COL-OP	0~15	8	*FIX	
COLOUR OFFSET (SECAM)	COL-OS	0~15	8	*FIX	
COLOUR OFFSET (NTSC358)	COL-03	0~15	4	*FIX	
COLOUR OFFSET (NTSC443)	COL-O4	0~15	4	*FIX	
SHARPNESS OFFSET (PAL)	SHP-OP	0~15	8	*FIX	
SHARPNESS OFFSET (SECAM)	SHP-OS	0~15	4	*FIX	

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ	REMARK
SHARPNESS OFFSET (NTSC358)	SHP-O3	0~15	12	*FIX	
SHARPNESS OFFSET (NTSC443)	SHP-O4	0~15	8	*FIX	
VERTICAL SCAN DISABLE	VSD	0(DISABLE)/1(ENABLE)	0	*FIX	
BLACK STRETCH	BKS	0(DISABLE)/1(ENABLE)	1	*FIX	
AUTOMATIC VOLUME LEVELING	AVL	0(DISABLE)/1(ENABLE)	1	*FIX	
FAST FILTER IF-PLL	FFI	0(DISABLE)/1(ENABLE)	0	*FIX	
ENABLE VERTICAL GUARD (RGB BLANKING)	EVG	0(DISABLE)/1(ENABLE)	1	*FIX	
EHT TRACKING MODE (HCO)	EHT	0(DISABLE)/1(ENABLE)	1	*FIX	
OVERSCAN SWITCH OFF	OSO	0(DISABLE)/1(ENABLE)	0	*FIX	
AUTO COLOUR LIMIT	ACL	0(DISABLE)/1(ENABLE)	0	*FIX	
FORCED COLOUR LIMIT	FCO	0(DISABLE)/1(ENABLE)	0	*FIX	
SOUND SYSTEM M	S-M	0(DISABLE)/1(ENABLE)	0	*FIX	
SOUND SYSTEM DK	S-DK	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
SOUND SYSTEM I	S-I	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
SOUND SYSTEM BG	S-BG	0(DISABLE)/1(ENABLE)	1	*FIX	
PLAYBACK SECAM	P-SECAM	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
FE (RF) NTSC 3.58	F-N358	0(DISABLE)/1(ENABLE)	0	*FIX	
FE (RF) NTSC 4.43	F-N443	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
FE (RF) SECAM	F-SECAM	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
VIDEO MUTE AT IDENT LOSS	VMI	0(DISABLE)/1(ENABLE)	1	*FIX	
VIDEO MUTE AT PROGRAM/SOURCE CHANGE	VMC	0(DISABLE)/1(ENABLE)	1	*FIX	
HOTEL MODE	HTL	0(DISABLE)/1(ENABLE)	0	*FIX	
REDUCED FM DEMODULATOR GAIN FOR BTSC SIGNAL	BTSC	0(DISABLE)/1(ENABLE)	0	*FIX	
NUMBER OF EXTERNAL AV SOURCE	AV	0 FOR1 AV/1 FOR 2AV	1 (0)	*FIX	
FM WINDOW SELECTION	FMWS	0(DISABLE)/1(ENABLE)	0	*FIX	
SOUND MUTE BIT 0	SM0	0(DISABLE)/1(ENABLE)	1	*FIX	
SOUND MUTE BIT 1	SM1	0(DISABLE)/1(ENABLE)	0	*FIX	
THAI LANGUAGE	THA	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	
ARABIC LANGUAGE	ARA	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
MALAY LANGUAGE	MAL	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
CHINESE LANGUAGE	CHI	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
FRENCH LANGUAGE	FRE	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
RUSSIAN LANGUAGE	RUS	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
FORCED V-SYNC SLICING LEVEL	FSL	0(DISABLE)/1(ENABLE)	0	*FIX	
SYNC OF OSD	HP2	0(DISABLE)/1(ENABLE)	0	*FIX	
TUNER SELECTION (0:SHARP/ALPS;1:MURATA)	CPT	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	
BILINGUAL	BIL	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	
IF AGC SPEED BIT 0	AGC0	0(DISABLE)/1(ENABLE)	1	*FIX	
IF AGC SPEED BIT 1	AGC1	0(DISABLE)/1(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (RF)	FOA-FE	0(DISABLE)/1(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (RF)	FOB-FE	0(DISABLE)/1(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (OFF AIR)	FOA-AV	0(DISABLE)/1(ENABLE)	1	*FIX	
PHI-1 TIME CONSTANT (OFF AIR)	FOB-AV	0(DISABLE)/1(ENABLE)	1	*FIX	
LED BLINK SPEED	LED F	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	
VOLUME CONTROL PWM TABLE	MSA	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	
OUTPUT VERTICAL GUARD	NDF	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	

NOTE :

1) *FIX: PLEASE DO NOT CHANGE FIXED DATA WITHOUT SPECIFIC INSTRUCTION. Please set the EEPROM initial data according to the value in parenthesis ( ) before adjustment.
2) *2: CDL ADJUST = 7
3) *3: S-COR ADJUST = 20
4) *4: After SUB-COLOUR ADJUSTMENT, ADD 6 STEPS INTO THE DATA OF SUB-COL. NEW SUB-COL=SUB-COL DATA OF 75% WHITE & RED PORTIONS AT SAME LEVEL +6 STEPS.

SHIPPING SETTING & CHECKING

(1) The following default data has been factory-set for the E²PROM.

ITEMS	DATA SETTING
LAST PROGRAM/CHANNEL	1
FLASHBACK PROGARM/CH	1
DIGIT	1
C-SYSTEM	AUTO
S-SYSTEM	B/G
SKIP	OFF
AFC	ON
VOLUME	1
CONTRAST	60 (MAX)
COLOUR	0 (CENTER)
BRIGHTNESS	0 (CENTER)
TINT	0 (CENTER)
SHARPNESS	0 (CENTER)
WHITE TEMP	STANDARD
REMINDER TIMER	In-active, "--:--"
ON TIMER	In-active, "--:--"
OFF TIMER	In-active, "--:--"
LAST POWER	POWER-ON
LANGUAGE	THAI
BLUE BACK MUTE	ON
HOTEL MODE	OFF
0 CHANNEL SKIP	ON
LAST TV/AV	TV

PIF ADJUSTMENT

ADJUSTMENT PRECAUTION: Make sure TV Set in "Normal Condition" before switch to Service Mode for adjustment.

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**Tuner IFT (PRESET)**	1. Get the tuner ready to receive the E-9 CH signal, but with no signal input. Adjust the PLL data. 2. Connect the sweep generator's output cable to the tuner antenna. (RF SWEEP) 3. Adjust the sweep generator's to 80dBuV. 4. Connect the response lead (use LOW IMPEDANCE probe with wave detector; see **Fig.1**) to the tuner's IF output terminal. (This terminal must have the probe alone connected). 5. Set the RF AGC to 0 - 6 V with no saturation with the waveform. 6. Adjust the tuner IF coil to obtain the waveform as shown in **Fig. 2**. **Note: Be sure to keep the tuner cover in position during this adjustment.**	 **Fig. 1** 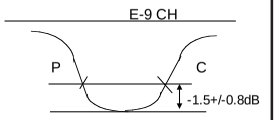 **Fig. 2**
2	**RF-AGC TAKE OVER POINT ADJUSTMENT (I²C BUS CONTROL)**	1. Receive "PAL COLOUR BAR" signal. • Signal Strength: 57 ±1 dBμV (75 ohm open) 2. Connect the oscilloscope to TP201 (Tuner's AGC Terminal) as shown in **Fig. 3**. 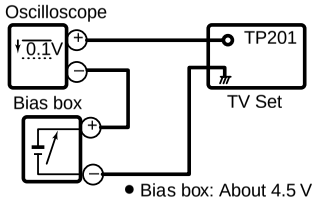 • Bias box: About 4.5 V **Fig. 3** 3. Call "AGC" mode in service mode. Adjust the "AGC" bus data to obtain the Tuner output voltage level at TP201 is drop 1 step data from maximum voltage. 4. Change the antenna input signal to 63~67dBμV, and make sure there is no noise. 5. Turn up the input signal to 90~95 dBμV to be sure that there is no cross modulation beat.	**Note:** **For the 50 ohm signal strength gauge, when not using 50/75 impedance adapter, signal strength is 52 ±1 dBμV(75 ohm open), instead of 57 ±1 dBμV (75 ohm open).** **Precaution:** **The loss of using impedance adapter**

PURITY ADJUSTMENT

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**PURITY ADJ.**	1. Receive the GREEN-ONLY signal. Adjust the beam current to ~ 700 μA. 2. Degauss the CRT enough with the degausing coil. 3. Maintain the purity magnet at the zero magnetic field and keep the static convergence roughly adjusted. 4. Observe the points a, b, as shown in **Fig. 1-1** through the microscope. Adjust the landings to A rank requirement. 5. Orient the raster rotation to 0 eastward. 6. Tighten up the deflection coil screws. ● Tightening torque: 108N ± 20 N (11kgf ± 2 kgf) 7. Make sure the CRT corners landing meet the A rank requirements. If not, stick the magnet sheet to correct it. **Note:This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 700 μA.** * For the following colours press R/C RGB key to change. Green-only → Blue-only → Red-only Signal-colour screen cleared	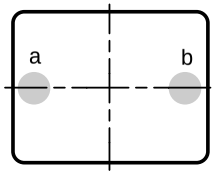 **Fig. 1-1** 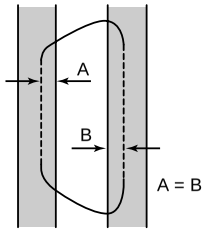 **Fig. 1-2** Rank "A" (on the right of the CRT) 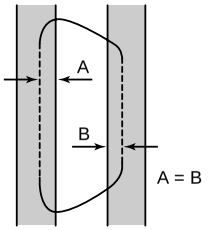 **Fig. 1-3** Rank "A" (on the left of the CRT) * Press R/C RGB key for 1 second in NORMAL MODE, the colour will change to RGB mono colour mode.

CONVERGENCE ADJUSTMENT

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**CONVERGENCE ADJ. (To be done after the purity adjustment.)**	1. Receive the "Crosshatch Pattern" signal. 2. Using the remote controller, call NORMAL mode. Static convergence 1. Turn the 4-pole magnet to a proper opening angle in order to superpose the blue and red colours. 2. Turn the 6-pole magnet to a proper opening angle in order to superpose the green colour over the blue and red colours. Dynamic convergence 1. Adjust the convergence on the fringes of the screen in the following steps. a) Fig. a : Drive the wedge at point "a" and swing the deflection coil upward. b) Fig. b : Drive the wedge at point "b" and "c" and swing the deflection coil downward. c) Fig. c : Drive the "c" wedge deeper and swing the deflection coil rightward. d) Fig. d : Drive the "b" wedge deeper and swing the deflection coil leftward. 2. Fix all the wedges on the CRT and apply glass tape over them. 3. Apply lacquer to the deflection yoke lock screw, magnet unit (purity, 4-pole, 6-pole magnets) and magnet unit lock screw. Finally received the Red-only and Blue-only signals to make sure there is no other colours on the screen. 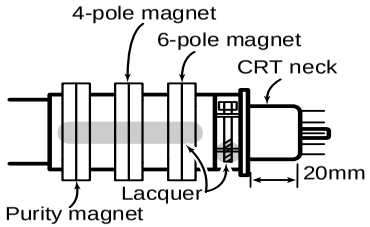	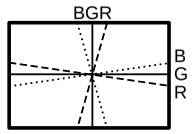 **Fig. a** 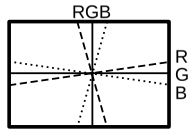 **Fig. b** 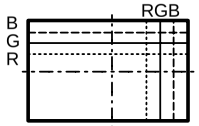 **Fig. c** 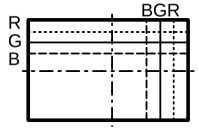 **Fig. d** 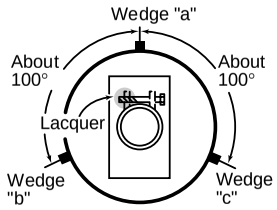

CRT CUT-OFF, BACKGROUND AND SUB-CONTRAST ADJUSTMENT

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**CRT CUTOFF ADJUSTMENT (I²C BUS CONTROL)**	Remark **1. Before CRT cutoff adjustment, SUB-BRIGHT, DRI-RS/RW/RC, DRI-GS/GW/GC, DRI-BS/BW/BC, CUT-R and CUT-G must be INITIAL DATA.** **2. CRT Cutoff adjustment must be done inside a dark room.** 1. Switch TV to VIDEO mode,BLUE BACK OFF, with NO VIDEO signal. 2. Press R/C to set Picture Normal condition. 3. First, off the screen by adjust screen variable resistor. *4. Next, checking AKB circuit function by slowly increase screen variable resistor until colour raster suddenly on and off (AKB start function). 5. Then continue adjust until retrace line appear. 6. Finally, slowly decrease the screen variable resistor until screen retrace line cut off (Not Raster) Note : Must confirm the AKB function in set before continue the next adjustment.	*Alternative Procedure (1) Step (1), (2), (3) and (4) are same as beside procedure. (2) Then continue adjust until retrace line appear and make sure the colour appear whether red, green or biue. (3) Connect the oscilloscope to related test points as below which is based on colour appear at (2) RED=TP47R, GREEN=TP47G, BLUE=TP47B (4) Then adjust Screen VR until the tip of signal reach 3.2Vdc. 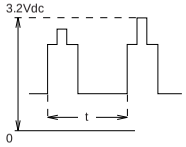
2	**SUB-BRIGHTNESS ADJUSTMENT (I²C BUS CONTROL)**	1. Call " SUB-BRI" in service mode. (Receive Cross-hatch pattern with 5 black level windows) 2. Adjust the " SUB BRIGHT " bus data in order that the line 1and 2 have the same darkness wherelse line 3 is one step (data) brighter than line 2. Finally data minus 1 to make line 1, 2, and 3 are in same level (darkness).	1  Line 3 is one step (data) brighter than line 2 2 
3	**WHITE BALANCE SERVICE MODE ADJ. (I²C BUS CONTROL)**	1. Receive the "WHITE" pattern with BURST signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC miliammeter between TP602 (-) TP603 (+). 4. Check Beam current should be around 1100 μA. 5. Set it to service mode and adjust the DRI-GS, & DRI-BS data to have a colour temperature of 12300°K (white). * Note . 6. Receive "WHITE" pattern, WITH BURST signal, and set BRIGHTNESS Y by generator, to **10 cd/m2 (MINOLTA CA-100) by reducing LUMINATE Y signal. 7. Adjust "CUT-R" & "CUT-G" to get desired colour temperature #. Then go back NORMAL mode (HIGH BRIGHT**) to check colour temperature. If out of range, back to 1. **Note:This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 700μA.** * Adjust DRI-GC/GW, DRI-BC/BW as following DATA, after finishing DRI-BS and DRI-GS DATA ADJUSTMENT. DRI-RW = 32 (FIXED), DRI-RS = 32 (FIXED) DRI-BC = "DRI-BS" (For 12300° K Condition)	# 12300°K X : 0.272 Y : 0.275 (MINOLTA COLOUR ANALYZER CA-100) ***Note: Above Data can be UP/DOWN by Volume key.** LOW HIGH 21" 10cd/m2 120cd/m2 * 12300°K DRI-GW="DRI-GS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-7 DRI-RC=25
4	**Max. beam check**	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC miliammeter between TP603 (+) & TP602 (–). (Full Scale: 3 mA Range) 4. Beam current must be within 1100 ± 100 μA.	

HORIZONTAL AND VERTICAL DEFLECTION LOOP ADJUSTMENT

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**V-SLOPE (I²C BUS CONTROL)**	1. Receive Monoscope Pattern Signal. 2. Call the "V-LIN" mode. 3. Increase or decrease "V-LIN" by Volume key till the horizontal line in the center of monoscope is just at the position where the blanking starts.	
2	**V-SHIFT-50 (I²C BUS CONTROL)**	1. Call the "V-CENT" mode. 2. Increase or decrease "V-CENT" by Volume key till the picture is centered.	
3	**V-AMP50 (I²C BUS CONTROL)**	1. Call the "V-AMP" mode. 2. Increase or decrease "V - AMP" by Volume key to set overscan of 9.5% typical. Adjustment Spec 9.5% range +1% -0%.	
4	**H-SHIFT (50) (H-CENTER)**	1. Call the "H-CENT" mode. 2. Increase or decrease "H-CENT" by Volume key to center the picture horizontal.	
5	**S-CORRECTION (I²C BUS CONTROL)**	1. SET DATA TO 20 * Check the E-5 CH Monoscope Pattern then re-adjust V-Slope, V-Shift and V-Amp to makesure adjustment is in acceptable Ring-Shaped.	
6	**SUB-SHARPNESS**	1. SET DATA TO 20	
1	**Focus**	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Adjust the focus control to get the best focusing.	

PAL CHROMA ADJUSTMENT

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**SUB COLOUR (I²C BUS CONTROL)**	1. Receive the "PAL Color Bar" signal. 2. Press R/C to set Picture Normal condition. 3. Connect the oscilloscope to Red cathode(D882 Chathode) for 21" (Normal Neck). • Range : 20 V/div. (AC) (Using 10:1 probe) • Sweep time : 10 μsec/div. 4. Using the R/C call "SUB COL" in SERVICE mode. Adjust SUB COLOUR bus data, so that the 75% White & Red portions of PAL Color Bar be at the same level shown as **Fig. 1-1**. 5. Add another 6 steps up into the value of SUB-COL obtained in 4. 6. Clear the SERVICE Mode.	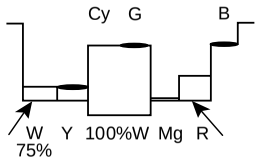 **Fig. 1-1**

NTSC CHROMA ADJUSTMENT

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**SUB-TINT (I^2C BUS CONTROL)**	1. Receive the "NTSC3.58 Colour Bar" signal thru AV in. 2. Connect the oscilloscope to TP47B (P882 pin 5) BLUE-OUT. ● Range : 100mV/div. (AC) (Use Probe 10:1) ● Sweep time: 10 µsec/div. 3. Call the "SUB-TINT" mode in service mode. Adjust the "SUB-TINT" bus data to obtain the waveform shown as **Fig. 1-1**. 4. Clear the SERVICE mode.	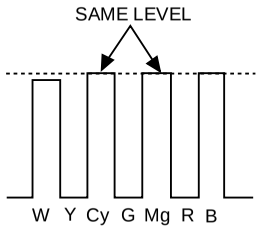 **Fig. 1-1**

PROTECTOR OPERATION CHECKING

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**BEAM PROTECTOR**	1. Receive "Monoscope Pattern" signal. 2. Set CONTRAST MAX. 3. Set BRIGHT MAX. 4. During the Collector & Emitter of Q883/5/7 short, make sure the protector ON and switch to standby mode.	* Select one of Q883/5/7 to do each short test.
2	**H.V PROTECTOR**	1. Receive "Monoscope Pattern" signal. 2. Connect output of Bias Box to D603 cathode (R610 side). 3. Set voltage of Bias Box to 18V and make sure the protector is not work. 4. Set voltage of Bias Box to 27V, and make sure the protector is work.	
3	**Other protectors**	1. Once finish rectified Electrolytic Capacitor short testing in +B line, check all possible damaged components on +B line. (Use random selected set for inspection)	

A/V INPUT AND OUTPUT CHECKING

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**VIDEO AND AUDIO OUT-PUT CHECK**	1. Receive the "PAL Color Bar" signal (100% White Color Bar, Sound 400 Hz 100% Mod). 2. Terminate the Video output with a 75 ohm impedance. Make sure the output is as specified (1.0 Vp-p ±3 dB). 3. Terminate the Audio output with a 10k ohm impedance. Make sure the O/P is as specified (1.76 Vp-p ±3 dB).	
2	**VIDEO AND AUDIO INPUT CHECK**	1. Using the TV/AV key on the remote controller, make sure that the modes change in order of TV, AV & TV again and the video & audio output are according to the input terminal for each mode.If connect input to Front and Rear AV terminal, input terminal of Front AV will be selected.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**CONTRAST key**	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select CONTRAST. 3. Press Volume Up/Down key to check whether the CONTRAST effect is OK or not.	
2	**COLOUR key**	1. Receive "Colour Bar" signal. 2. Set P-Mode to select COLOUR. 3. Press Volume Up/Down key to check whether the COLOUR effect is OK or not.	
3	**BRIGHTNESS key**	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select BRIGHTNESS. 3. Press Volume Up/Down key to check whether the BRIGHTNESS effect is OK or not	
4	**TINT key**	1. Receive the "NTSC Colour Bar" signal thru AV in. 2. Set P-Mode to select TINT. 3. Press Volume Up/Down key to check TINT, UP for GREEN direction and DOWN for PURPLE direction whether is OK or not.	
5	**SHARPNESS Key**	1. Receive "Monoscope Pattern" signal. 2. Set P-mode to select SHARPNESS. 3. Press Volume Up/Down key to check whether the SHARPNESS effect is OK or not.	
6	**CH DISPLAY COLOUR**	1. All Ch (1~99) will have an OSD display of the channel number in green colour under AFT ON condition.	
7	**NORMAL Key**	1. Once in PICTURE Mode, and the NORMAL key is pressed, all the settings will be present to normal setting. (Normal setting value for every mode). ● CONTRAST : MAX ● COLOUR : CENTER ● BRIGHTNESS : CENTER ● TINT : CENTER ● SHARPNESS : CENTER	
8	**White Temp**	1. Receive "Monoscope Pattern" signal. 2. Set FUNCTION to select WHITE TEMP. 3. Press Volume Up/Down key to check WHITE TEMP Option, STANDARD: NORMAL SETTING, WARM for more REDDISH direction changing, COOL for more BLUISH direction changing.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO) (Continued)

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
9	**Colour system**	1. Receive the "PAL COLOUR BAR" signal, press the COLOUR SYSTEM key to select modes except PAL, check the COLOUR is not working properly. Then, select the "PAL" mode. Check again its colour so that it is working properly. 2. Receive "NTSC 4.43/3.58 COLOUR BAR" signal thru AV, press COLOUR SYSTEM key to select modes except N4.43/3.58, check the COLOUR is not working properly. Then, select the "NTSC 4.43/3.58" mode. Check again its colour so that it is working properly.	
10	**Sound system**	Receive "PAL-B/G" signal, check the sound output to make sure it is working properly.	
11	**NOISE MUTE CHECKING**	1. Receive "PAL COLOUR BAR" signal. 2. Turn up the volume control to maximum, make sure the sound is heard from the speakers. Then put the unit in no signal state. 3. Check the sound mute is effective. 4. Finally turn sound level of CTV to minimum.	
12	**OSD LANGUAGE QUANTITY CHECK**	Check OSD LANGUAGE quantity and type. TWO OSD LANGUAGE: ENGLISH THAILAND.	

HEADPHONE JACK CHECKING

NO.	Adjustment part	Adjusting procedure and conditions	Waveform and others
1	**HEADPHONE OUTPUT CHECKING**	1. Receive PAL COLOUR PAR with SOUND 400Hz, 100% MODULATION (±50kHz Dev). 2. Maximum volume, and check the headphone output with 400Hz sound and no sound out from speaker.	

NO.	Adjustment point	Adjusting procedure and conditions	Waveform and others
1	**BILINGUAL FUNCTION CHECKING**	1. Receive bilingual channel. 2. Press R/C "BILINGUAL" button and the sound will change from sound 1 to sound 2.	

MEMORY MAP

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
00	PASS WORD								55	00-FF							
01	PASS WORD								4F	00-FF							
02	PASS WORD								43	00-FF							
03	PASS WORD								A1	00-FF							
04																	
05																	
06	AGC TAKE-OVER								0E	00-3F							
07	V-SLOPE								20	00-3F							
08	V-AMPLITUDE								20	00-3F							
09	V-CENTER								20	00-3F							
0A	H-CENTER								20	00-3F							
0B	H-SIZE								20	00-3F							
0C	EW-PARALLELOGRAM								20	00-3F							
0D	EW-PARABOLA/WIDTH								20	00-3F							
0E	EW-UPPER CORNER								20	00-3F							
0F	EW-LOWER CORNER								20	00-3F							
10	EW-TRAPEZIUM								20	00-3F							
11	HORIZONTAL-BOW								20	00-3F							
12	S-CORRECTION								00	00-3F							
13																	
14																	
15																	
16	DRIVE-R (STANDARD)								20	00-3F							
17	DRIVE-G (STANDARD)								20	00-3F							
18	DRIVE-B (STANDARD)								20	00-3F							
19	DRIVE-R (WARM)								20	00-3F							
1A	DRIVE-G (WARM)								20	00-3F							
1B	DRIVE-B (WARM)								20	00-3F							
1C	DRIVE-R (COOL)								19	00-3F							
1D	DRIVE-G (COOL)								20	00-3F							
1E	DRIVE-B (COOL)								20	00-3F							
1F																	
20																	
21																	
22	SUB-VOLUME								3F	00-3F							
23	SUB-CONTRAST								3F	00-3F							
24	SUB-COLOUR								20	00-3F							
25	SUB-BRIGHTNESS								20	00-3F							
26	SUB-TINT								20	00-3F							
27	SUB-SHARPNESS								20	00-3F							
28	HTL-VOLUME								20	00-3F							
29	HTL-POSITION								FF	00-FF							
2A																	
2B																	
2C																	
2D	OSD-REFERENCE								0F	00-0F							
2E	CUTOFF LEVEL -OFFSET R								20	00-3F							(1) 20th August 2001:Change of range & default.
2F	CUTOFF LEVEL -OFFSET G								20	00-3F							
30	CATHODE DRIVE LEVEL								00	00-0F							
31	Y-DELAY (TV PAL)								0C	00-0F							
32	Y-DELAY (TV SECAM)								0F	00-0F							
33	Y-DELAY (TV N358)								0C	00-0F							
34	Y-DELAY (TV N443)								0C	00-0F							
35	Y-DELAY (TV BW)								0C	00-0F							
36	Y-DELAY (AV PAL)								0C	00-0F							
37	Y-DELAY (AV SECAM)								0F	00-0F							
38	Y-DELAY (AV N358)								0C	00-0F							
39	Y-DELAY (AV N443)								0C	00-0F							
3A	Y-DELAY (AV BW)								0C	00-0F							
3B	COLOUR-OFFSET (PAL)								08	00-0F							
3C	COLOUR-OFFSET (SECAM)								08	00-0F							
3D	COLOUR-OFFSET (N358)								04	00-0F							
3E	COLOUR-OFFSET (N443)								04	00-0F							
3F	SHARPNESS-OFFSET (PAL)								08	00-0F							
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
40	SHARPNESS-OFFSET (SECAM)								04	00-0F							
41	SHARPNESS-OFFSET (N358)								0C	00-0F							
42	SHARPNESS-OFFSET (N443)								08	00-0F							
43																	
44	FCO	ACL	OSO	EHT	EVG	FFI	AVL	BKS	1B	00-FF							
45	SECAM	N443	N358	PB-SECAM	BG	I	DK	M	DE	00-FF							
46	SM1	SM0	FMWS	AV	BTSC	HTL	VMC	VMI	53	00-FF							
47	HP2	FSL	RUS	FRA	CHN	MLY	ARB	THA	3E	00-FF							
48	FOB-AV	FOA-AV	FOB-FE	FOA-FE	AGC1	AGC0	BIL	CPT	C4	00-FF							
49						NDF	MSA	LED-F	00	00-F3							(1) 20th August 2001: Added 3 new items.
4A																	
4B																	
4C	VOLUME								01	00-3C							
4D	CONTRAST								3C	00-3C							
4E	COLOUR								1E	00-3C							
4F	BRIGHTNESS								1E	00-3C							
50	TINT								1E	00-3C							
51	SHARPNESS								1E	00-3C							
52																	
53																	
54																	
55	POSITION/AV1/AV2								01	00-FF							
56	FAV-POS A								0A	00-FF							
57	FAV-POS B								14	00-FF							
58	FAV-POS C								1E	00-FF							
59	FAV-POS D								28	00-FF							
5A																	
5B																	
5C	LAST POWER MODE								00	00-01							
5D	WHITE-TEMP								00	00-02							
5E	BLUE BACK								00	00-01							
5F	LANGUAGE								00	00-07							
60	LAST DIGIT MODE (1 OR 2)								00	00-01							
61																	
62	SKIP 0	SKIP 1	SKIP 2	SKIP 3	SKIP 4	SKIP 5	SKIP 6	SKIP 7	80	00-FF							
63	SKIP 8	SKIP 9	SKIP 10	SKIP 11	SKIP 12	SKIP 13	SKIP 14	SKIP 15	00	00-FF							
64	SKIP 16	SKIP 17	SKIP 18	SKIP 19	SKIP 20	SKIP 21	SKIP 22	SKIP 23	00	00-FF							
65	SKIP 24	SKIP 25	SKIP 26	SKIP 27	SKIP 28	SKIP 29	SKIP 30	SKIP 31	00	00-FF							
66	SKIP 32	SKIP 33	SKIP 34	SKIP 35	SKIP 36	SKIP 37	SKIP 38	SKIP 39	00	00-FF							
67	SKIP 40	SKIP 41	SKIP 42	SKIP 43	SKIP 44	SKIP 45	SKIP 46	SKIP 47	00	00-FF							
68	SKIP 48	SKIP 49	SKIP 50	SKIP 51	SKIP 52	SKIP 53	SKIP 54	SKIP 55	00	00-FF							
69	SKIP 56	SKIP 57	SKIP 58	SKIP 59	SKIP 60	SKIP 61	SKIP 62	SKIP 63	00	00-FF							
6A	SKIP 64	SKIP 65	SKIP 66	SKIP 67	SKIP 68	SKIP 69	SKIP 70	SKIP 71	00	00-FF							
6B	SKIP 72	SKIP 73	SKIP 74	SKIP 75	SKIP 76	SKIP 77	SKIP 78	SKIP 79	00	00-FF							
6C	SKIP 80	SKIP 81	SKIP 82	SKIP 83	SKIP 84	SKIP 85	SKIP 86	SKIP 87	00	00-FF							
6D	SKIP 88	SKIP 89	SKIP 90	SKIP 91	SKIP 92	SKIP 93	SKIP 94	SKIP 95	00	00-FF							
6E	SKIP 96	SKIP 97	SKIP 98	SKIP 99					00	00-FF							
6F																	
70																	
71																	
72																	
73																	
74	TUNING FREQUANCY (HIGHER PART)										S-SYS						POS 0
75	TUNING FREQUANCY (LOWER PART)										000:BG						
76	S-SYS		AFT	(auto)			C-SYS				001:I						
77	TUNING FREQUANCY (HIGHER PART)										010:DK						POS 1
78	TUNING FREQUANCY (LOWER PART)										011:M						
79	S-SYS		AFT	(auto)			C-SYS										
7A	TUNING FREQUANCY (HIGHER PART)										AFT						POS 2
7B	TUNING FREQUANCY (LOWER PART)										0:OFF						
7C	S-SYS		AFT	(auto)			C-SYS				1:ON						
7D	TUNING FREQUANCY (HIGHER PART)																POS 3
7E	TUNING FREQUANCY (LOWER PART)																
7F	S-SYS		AFT	(auto)			C-SYS										
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
80	TUNING FREQUANCY (HIGHER PART)																POS 4
81	TUNING FREQUANCY (LOWER PART)																
82	S-SYS			AFT	(auto)			C-SYS									
83	TUNING FREQUANCY (HIGHER PART)																POS 5
84	TUNING FREQUANCY (LOWER PART)																
85	S-SYS			AFT	(auto)			C-SYS									
86	TUNING FREQUANCY (HIGHER PART)																POS 6
87	TUNING FREQUANCY (LOWER PART)																
88	S-SYS			AFT	(auto)			C-SYS									
89	TUNING FREQUANCY (HIGHER PART)																POS 7
8A	TUNING FREQUANCY (LOWER PART)																
8B	S-SYS			AFT	(auto)			C-SYS									
8C	TUNING FREQUANCY (HIGHER PART)																POS 8
8D	TUNING FREQUANCY (LOWER PART)																
8E	S-SYS			AFT	(auto)			C-SYS									
8F	TUNING FREQUANCY (HIGHER PART)																POS 9
90	TUNING FREQUANCY (LOWER PART)																
91	S-SYS			AFT	(auto)			C-SYS									
92	TUNING FREQUANCY (HIGHER PART)																POS 10
93	TUNING FREQUANCY (LOWER PART)																
94	S-SYS			AFT	(auto)			C-SYS									
95	TUNING FREQUANCY (HIGHER PART)																POS 11
96	TUNING FREQUANCY (LOWER PART)																
97	S-SYS			AFT	(auto)			C-SYS									
98	TUNING FREQUANCY (HIGHER PART)																POS 12
99	TUNING FREQUANCY (LOWER PART)																
9A	S-SYS			AFT	(auto)			C-SYS									
9B	TUNING FREQUANCY (HIGHER PART)																POS 13
9C	TUNING FREQUANCY (LOWER PART)																
9D	S-SYS			AFT	(auto)			C-SYS									
9E	TUNING FREQUANCY (HIGHER PART)																POS 14
9F	TUNING FREQUANCY (LOWER PART)																
A0	S-SYS			AFT	(auto)			C-SYS									
A1	TUNING FREQUANCY (HIGHER PART)																POS 15
A2	TUNING FREQUANCY (LOWER PART)																
A3	S-SYS			AFT	(auto)			C-SYS									
A4	TUNING FREQUANCY (HIGHER PART)																POS 16
A5	TUNING FREQUANCY (LOWER PART)																
A6	S-SYS			AFT	(auto)			C-SYS									
A7	TUNING FREQUANCY (HIGHER PART)																POS 17
A8	TUNING FREQUANCY (LOWER PART)																
A9	S-SYS			AFT	(auto)			C-SYS									
AA	TUNING FREQUANCY (HIGHER PART)																POS 18
AB	TUNING FREQUANCY (LOWER PART)																
AC	S-SYS			AFT	(auto)			C-SYS									
AD	TUNING FREQUANCY (HIGHER PART)																POS 19
AE	TUNING FREQUANCY (LOWER PART)																
AF	S-SYS			AFT	(auto)			C-SYS									
B0	TUNING FREQUANCY (HIGHER PART)																POS 20
B1	TUNING FREQUANCY (LOWER PART)																
B2	S-SYS			AFT	(auto)			C-SYS									
B3	TUNING FREQUANCY (HIGHER PART)																POS 21
B4	TUNING FREQUANCY (LOWER PART)																
B5	S-SYS			AFT	(auto)			C-SYS									
B6	TUNING FREQUANCY (HIGHER PART)																POS 22
B7	TUNING FREQUANCY (LOWER PART)																
B8	S-SYS			AFT	(auto)			C-SYS									
B9	TUNING FREQUANCY (HIGHER PART)																POS 23
BA	TUNING FREQUANCY (LOWER PART)																
BB	S-SYS			AFT	(auto)			C-SYS									
BC	TUNING FREQUANCY (HIGHER PART)																POS 24
BD	TUNING FREQUANCY (LOWER PART)																
BE	S-SYS			AFT	(auto)			C-SYS									
BF	TUNING FREQUANCY (HIGHER PART)																POS 25
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
C0	TUNING FREQUANCY (LOWER PART)																
C1	S-SYS			AFT	(auto)			C-SYS									
C2	TUNING FREQUANCY (HIGHER PART)																POS 26
C3	TUNING FREQUANCY (LOWER PART)																
C4	S-SYS			AFT	(auto)			C-SYS									
C5	TUNING FREQUANCY (HIGHER PART)																POS 27
C6	TUNING FREQUANCY (LOWER PART)																
C7	S-SYS			AFT	(auto)			C-SYS									
C8	TUNING FREQUANCY (HIGHER PART)																POS 28
C9	TUNING FREQUANCY (LOWER PART)																
CA	S-SYS			AFT	(auto)			C-SYS									
CB	TUNING FREQUANCY (HIGHER PART)																POS 29
CC	TUNING FREQUANCY (LOWER PART)																
CD	S-SYS			AFT	(auto)			C-SYS									
CE	TUNING FREQUANCY (HIGHER PART)																POS 30
CF	TUNING FREQUANCY (LOWER PART)																
D0	S-SYS			AFT	(auto)			C-SYS									
D1	TUNING FREQUANCY (HIGHER PART)																POS 31
D2	TUNING FREQUANCY (LOWER PART)																
D3	S-SYS			AFT	(auto)			C-SYS									
D4	TUNING FREQUANCY (HIGHER PART)																POS 32
D5	TUNING FREQUANCY (LOWER PART)																
D6	S-SYS			AFT	(auto)			C-SYS									
D7	TUNING FREQUANCY (HIGHER PART)																POS 33
D8	TUNING FREQUANCY (LOWER PART)																
D9	S-SYS			AFT	(auto)			C-SYS									
DA	TUNING FREQUANCY (HIGHER PART)																POS 34
DB	TUNING FREQUANCY (LOWER PART)																
DC	S-SYS			AFT	(auto)			C-SYS									
DD	TUNING FREQUANCY (HIGHER PART)																POS 35
DE	TUNING FREQUANCY (LOWER PART)																
DF	S-SYS			AFT	(auto)			C-SYS									
E0	TUNING FREQUANCY (HIGHER PART)																POS 36
E1	TUNING FREQUANCY (LOWER PART)																
E2	S-SYS			AFT	(auto)			C-SYS									
E3	TUNING FREQUANCY (HIGHER PART)																POS 37
E4	TUNING FREQUANCY (LOWER PART)																
E5	S-SYS			AFT	(auto)			C-SYS									
E6	TUNING FREQUANCY (HIGHER PART)																POS 38
E7	TUNING FREQUANCY (LOWER PART)																
E8	S-SYS			AFT	(auto)			C-SYS									
E9	TUNING FREQUANCY (HIGHER PART)																POS 39
EA	TUNING FREQUANCY (LOWER PART)																
EB	S-SYS			AFT	(auto)			C-SYS									
EC	TUNING FREQUANCY (HIGHER PART)																POS 40
ED	TUNING FREQUANCY (LOWER PART)																
EE	S-SYS			AFT	(auto)			C-SYS									
EF	TUNING FREQUANCY (HIGHER PART)																POS 41
F0	TUNING FREQUANCY (LOWER PART)																
F1	S-SYS			AFT	(auto)			C-SYS									
F2	TUNING FREQUANCY (HIGHER PART)																POS 42
F3	TUNING FREQUANCY (LOWER PART)																
F4	S-SYS			AFT	(auto)			C-SYS									
F5	TUNING FREQUANCY (HIGHER PART)																POS 43
F6	TUNING FREQUANCY (LOWER PART)																
F7	S-SYS			AFT	(auto)			C-SYS									
F8	TUNING FREQUANCY (HIGHER PART)																POS 44
F9	TUNING FREQUANCY (LOWER PART)																
FA	S-SYS			AFT	(auto)			C-SYS									
FB	TUNING FREQUANCY (HIGHER PART)																POS 45
FC	TUNING FREQUANCY (LOWER PART)																
FD	S-SYS			AFT	(auto)			C-SYS									
FE	TUNING FREQUANCY (HIGHER PART)																POS 46
FF	TUNING FREQUANCY (LOWER PART)																
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
100		S-SYS		AFT	(auto)			C-SYS									POS 46
101				TUNING FREQUANCY (HIGHER PART)													POS 47
102				TUNING FREQUANCY (LOWER PART)													
103		S-SYS		AFT	(auto)			C-SYS									
104				TUNING FREQUANCY (HIGHER PART)													POS 48
105				TUNING FREQUANCY (LOWER PART)													
106		S-SYS		AFT	(auto)			C-SYS									
107				TUNING FREQUANCY (HIGHER PART)													POS 49
108				TUNING FREQUANCY (LOWER PART)													
109		S-SYS		AFT	(auto)			C-SYS									
10A				TUNING FREQUANCY (HIGHER PART)													POS 50
10B				TUNING FREQUANCY (LOWER PART)													
10C		S-SYS		AFT	(auto)			C-SYS									
10D				TUNING FREQUANCY (HIGHER PART)													POS 51
10E				TUNING FREQUANCY (LOWER PART)													
10F		S-SYS		AFT	(auto)			C-SYS									
110				TUNING FREQUANCY (HIGHER PART)													POS 52
111				TUNING FREQUANCY (LOWER PART)													
112		S-SYS		AFT	(auto)			C-SYS									
113				TUNING FREQUANCY (HIGHER PART)													POS 53
114				TUNING FREQUANCY (LOWER PART)													
115		S-SYS		AFT	(auto)			C-SYS									
116				TUNING FREQUANCY (HIGHER PART)													POS 54
117				TUNING FREQUANCY (LOWER PART)													
118		S-SYS		AFT	(auto)			C-SYS									
119				TUNING FREQUANCY (HIGHER PART)													POS 55
11A				TUNING FREQUANCY (LOWER PART)													
11B		S-SYS		AFT	(auto)			C-SYS									
11C				TUNING FREQUANCY (HIGHER PART)													POS 56
11D				TUNING FREQUANCY (LOWER PART)													
11E		S-SYS		AFT	(auto)			C-SYS									
11F				TUNING FREQUANCY (HIGHER PART)													POS 57
120				TUNING FREQUANCY (LOWER PART)													
121		S-SYS		AFT	(auto)			C-SYS									
122				TUNING FREQUANCY (HIGHER PART)													POS 58
123				TUNING FREQUANCY (LOWER PART)													
124		S-SYS		AFT	(auto)			C-SYS									
125				TUNING FREQUANCY (HIGHER PART)													POS 59
126				TUNING FREQUANCY (LOWER PART)													
127		S-SYS		AFT	(auto)			C-SYS									
128				TUNING FREQUANCY (HIGHER PART)													POS 60
129				TUNING FREQUANCY (LOWER PART)													
12A		S-SYS		AFT	(auto)			C-SYS									
12B				TUNING FREQUANCY (HIGHER PART)													POS 61
12C				TUNING FREQUANCY (LOWER PART)													
12D		S-SYS		AFT	(auto)			C-SYS									
12E				TUNING FREQUANCY (HIGHER PART)													POS 62
12F				TUNING FREQUANCY (LOWER PART)													
130		S-SYS		AFT	(auto)			C-SYS									
131				TUNING FREQUANCY (HIGHER PART)													POS 63
132				TUNING FREQUANCY (LOWER PART)													
133		S-SYS		AFT	(auto)			C-SYS									
134				TUNING FREQUANCY (HIGHER PART)													POS 64
135				TUNING FREQUANCY (LOWER PART)													
136		S-SYS		AFT	(auto)			C-SYS									
137				TUNING FREQUANCY (HIGHER PART)													POS 65
138				TUNING FREQUANCY (LOWER PART)													
139		S-SYS		AFT	(auto)			C-SYS									
13A				TUNING FREQUANCY (HIGHER PART)													POS 66
13B				TUNING FREQUANCY (LOWER PART)													
13C		S-SYS		AFT	(auto)			C-SYS									
13D				TUNING FREQUANCY (HIGHER PART)													POS 67
13E				TUNING FREQUANCY (LOWER PART)													
13F		S-SYS		AFT	(auto)			C-SYS									
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
140				TUNING FREQUANCY (HIGHER PART)													POS 68
141				TUNING FREQUANCY (LOWER PART)													
142		S-SYS		AFT	(auto)			C-SYS									
143				TUNING FREQUANCY (HIGHER PART)													POS 69
144				TUNING FREQUANCY (LOWER PART)													
145		S-SYS		AFT	(auto)			C-SYS									
146				TUNING FREQUANCY (HIGHER PART)													POS 70
147				TUNING FREQUANCY (LOWER PART)													
148		S-SYS		AFT	(auto)			C-SYS									
149				TUNING FREQUANCY (HIGHER PART)													POS 71
14A				TUNING FREQUANCY (LOWER PART)													
14B		S-SYS		AFT	(auto)			C-SYS									
14C				TUNING FREQUANCY (HIGHER PART)													POS 72
14D				TUNING FREQUANCY (LOWER PART)													
14E		S-SYS		AFT	(auto)			C-SYS									
14F				TUNING FREQUANCY (HIGHER PART)													POS 73
150				TUNING FREQUANCY (LOWER PART)													
151		S-SYS		AFT	(auto)			C-SYS									
152				TUNING FREQUANCY (HIGHER PART)													POS 74
153				TUNING FREQUANCY (LOWER PART)													
154		S-SYS		AFT	(auto)			C-SYS									
155				TUNING FREQUANCY (HIGHER PART)													POS 75
156				TUNING FREQUANCY (LOWER PART)													
157		S-SYS		AFT	(auto)			C-SYS									
158				TUNING FREQUANCY (HIGHER PART)													POS 76
159				TUNING FREQUANCY (LOWER PART)													
15A		S-SYS		AFT	(auto)			C-SYS									
15B				TUNING FREQUANCY (HIGHER PART)													POS 77
15C				TUNING FREQUANCY (LOWER PART)													
15D		S-SYS		AFT	(auto)			C-SYS									
15E				TUNING FREQUANCY (HIGHER PART)													POS 78
15F				TUNING FREQUANCY (LOWER PART)													
160		S-SYS		AFT	(auto)			C-SYS									
161				TUNING FREQUANCY (HIGHER PART)													POS 79
162				TUNING FREQUANCY (LOWER PART)													
163		S-SYS		AFT	(auto)			C-SYS									
164				TUNING FREQUANCY (HIGHER PART)													POS 80
165				TUNING FREQUANCY (LOWER PART)													
166		S-SYS		AFT	(auto)			C-SYS									
167				TUNING FREQUANCY (HIGHER PART)													POS 81
168				TUNING FREQUANCY (LOWER PART)													
169		S-SYS		AFT	(auto)			C-SYS									
16A				TUNING FREQUANCY (HIGHER PART)													POS 82
16B				TUNING FREQUANCY (LOWER PART)													
16C		S-SYS		AFT	(auto)			C-SYS									
16D				TUNING FREQUANCY (HIGHER PART)													POS 83
16E				TUNING FREQUANCY (LOWER PART)													
16F		S-SYS		AFT	(auto)			C-SYS									
170				TUNING FREQUANCY (HIGHER PART)													POS 84
171				TUNING FREQUANCY (LOWER PART)													
172		S-SYS		AFT	(auto)			C-SYS									
173				TUNING FREQUANCY (HIGHER PART)													POS 85
174				TUNING FREQUANCY (LOWER PART)													
175		S-SYS		AFT	(auto)			C-SYS									
176				TUNING FREQUANCY (HIGHER PART)													POS 86
177				TUNING FREQUANCY (LOWER PART)													
178		S-SYS		AFT	(auto)			C-SYS									
179				TUNING FREQUANCY (HIGHER PART)													POS 87
17A				TUNING FREQUANCY (LOWER PART)													
17B		S-SYS		AFT	(auto)			C-SYS									
17C				TUNING FREQUANCY (HIGHER PART)													POS 88
17D				TUNING FREQUANCY (LOWER PART)													
17E		S-SYS		AFT	(auto)			C-SYS									
17F				TUNING FREQUANCY (HIGHER PART)													POS 89
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
180	TUNING FREQUANCY (LOWER PART)																POS 89
181		S-SYS		AFT	(auto)			C-SYS									
182	TUNING FREQUANCY (HIGHER PART)																POS 90
183	TUNING FREQUANCY (LOWER PART)																
184		S-SYS		AFT	(auto)			C-SYS									
185	TUNING FREQUANCY (HIGHER PART)																POS 91
186	TUNING FREQUANCY (LOWER PART)																
187		S-SYS		AFT	(auto)			C-SYS									
188	TUNING FREQUANCY (HIGHER PART)																POS 92
189	TUNING FREQUANCY (LOWER PART)																
18A		S-SYS		AFT	(auto)			C-SYS									
18B	TUNING FREQUANCY (HIGHER PART)																POS 93
18C	TUNING FREQUANCY (LOWER PART)																
18D		S-SYS		AFT	(auto)			C-SYS									
18E	TUNING FREQUANCY (HIGHER PART)																POS 94
18F	TUNING FREQUANCY (LOWER PART)																
190		S-SYS		AFT	(auto)			C-SYS									
191	TUNING FREQUANCY (HIGHER PART)																POS 95
192	TUNING FREQUANCY (LOWER PART)																
193		S-SYS		AFT	(auto)			C-SYS									
194	TUNING FREQUANCY (HIGHER PART)																POS 96
195	TUNING FREQUANCY (LOWER PART)																
196		S-SYS		AFT	(auto)			C-SYS									
197	TUNING FREQUANCY (HIGHER PART)																POS 97
198	TUNING FREQUANCY (LOWER PART)																
199		S-SYS		AFT	(auto)			C-SYS									
19A	TUNING FREQUANCY (HIGHER PART)																POS 98
19B	TUNING FREQUANCY (LOWER PART)																
19C		S-SYS		AFT	(auto)			C-SYS									
19D	TUNING FREQUANCY (HIGHER PART)																POS 99
19E	TUNING FREQUANCY (LOWER PART)																
19F		S-SYS		AFT	(auto)			C-SYS									
1A0																	AV1
1A1																	
1A2					(auto)			C-SYS									
1A3																	AV2
1A4																	
1A5					(auto)			C-SYS									
1A6																	
1A7																	
1A8																	
1A9																	
1AA																	
1AB																	
1AC																	
1AD																	
1AE																	
1AF																	
1B0																	
1B1																	
1B2																	
1B3																	
1B4																	
1B5																	
1B6																	
1B7																	
1B8																	
1B9																	
1BA																	
1BB																	
1BC																	
1BD																	
1BE																	
1BF																	
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
1C0																	
1C1																	
1C2																	
1C3																	
1C4																	
1C5																	
1C6																	
1C7																	
1C8																	
1C9																	
1CA																	
1CB																	
1CC																	
1CD																	
1CE																	
1CF																	
1D0																	
1D1																	
1D2																	
1D3																	
1D4																	
1D5																	
1D6																	
1D7																	
1D8																	
1D9																	
1DA																	
1DB																	
1DC																	
1DD																	
1DE																	
1DF																	
1E0																	
1E1																	
1E2																	
1E3																	
1E4																	
1E5																	
1E6																	
1E7																	
1E8																	
1E9																	
1EA																	
1EB																	
1EC																	
1ED																	
1EE																	
1EF																	
1F0																	
1F1																	
1F2																	
1F3																	
1F4																	
1F5																	
1F6																	
1F7																	
1F8																	
1F9																	
1FA																	
1FB																	
1FC																	
1FD																	
1FE																	
1FF																	
MODEL									MODEL								
LETTER NO.									LETTER NO.								

GA1 HOTEL MODE APPLICATION

How to enable/disable the "Hotel Mode" ?

Ans: a) Press the R/C (FUNCTION) key until language selection appear, within five second press the (one/two digit) key and keep pressing it for five second, then you can see the hotel mode with four digits password.

b) Key in the four digits password starting with number "1", "3", "7", "9", then the hotel mode will be enable, you can switch on/off the hotel mode by using R/C (volume up/down) key.



#1 Ch 1 is your selected channel for hotel mode.

* We recommend
Before set the hotel mode, it is better to choose ch 1 & set s-vol level Up to 75% full scale. After set hotel mode, starting channel will be always ch 1 & maximum sound level out will be set the half of full scale.

* If you set hotel mode in AV, starting channel will be the last ch which you received before power off (same as normal operation)

CONDITION:

When using hotel mode, user can control "contrast", "brightness", "sharpness" and "tint" function.
But after power off, it will return to the initial setting.
You can't use:--
Preset mode
Fine tuning
Skip mode
System selection
The others function is allowed to be used.

TROUBLE SHOOTING TABLE

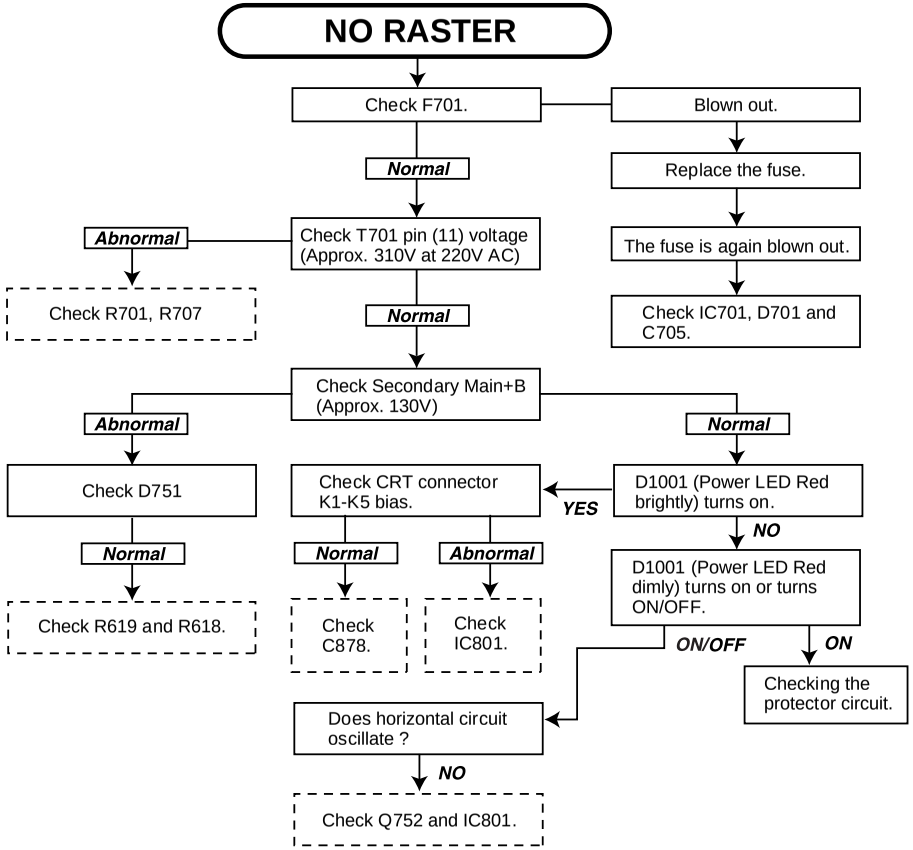

TROUBLE SHOOTING TABLE (Continued)

CIRCUITS TO BE CHECKED:
- Tuner.
- PIF.
- Automatic Gain Control.
- (5V), (32V) Power Source.

NO PICTURE, NO SOUND

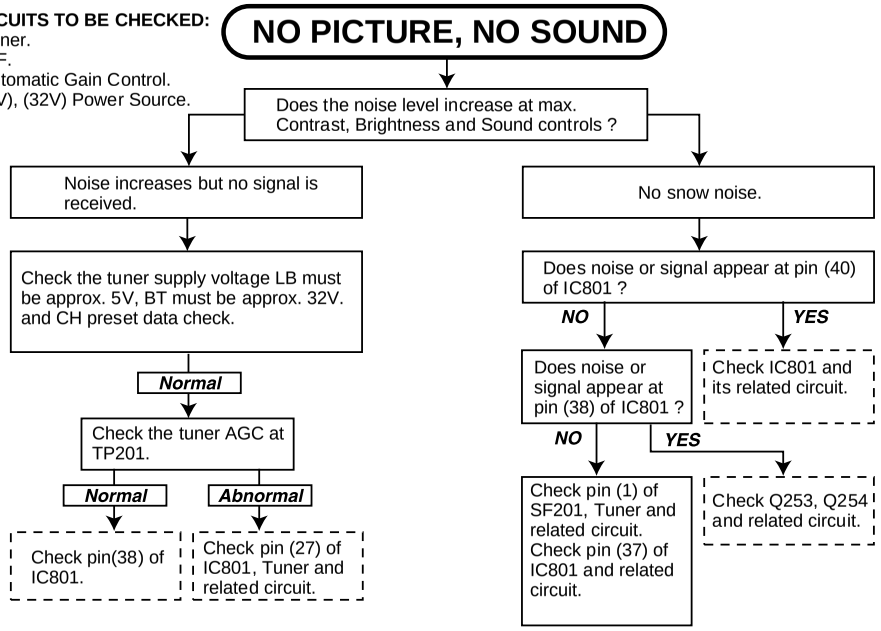
Does the noise level increase at max. Contrast, Brightness and Sound controls ?
Noise increases but no signal is received.
No snow noise.
Check the tuner supply voltage LB must be approx. 5V, BT must be approx. 32V. and CH preset data check.
Does noise or signal appear at pin (40) of IC801 ?
NO
YES
Normal
Does noise or signal appear at pin (38) of IC801 ?
Check IC801 and its related circuit.
Check the tuner AGC at TP201.
NO
YES
Normal
Abnormal
Check pin (1) of SF201, Tuner and related circuit. Check pin (37) of IC801 and related circuit.
Check Q253, Q254 and related circuit.
Check pin(38) of IC801.
Check pin (27) of IC801, Tuner and related circuit.

CIRCUITS TO BE CHECKED:
- Sound system pins (28) and (44) of IC801.
- Sound Detector Circuit.
- Sound Switch and Att. Control.
- Audio Output Circuit.

NO SOUND

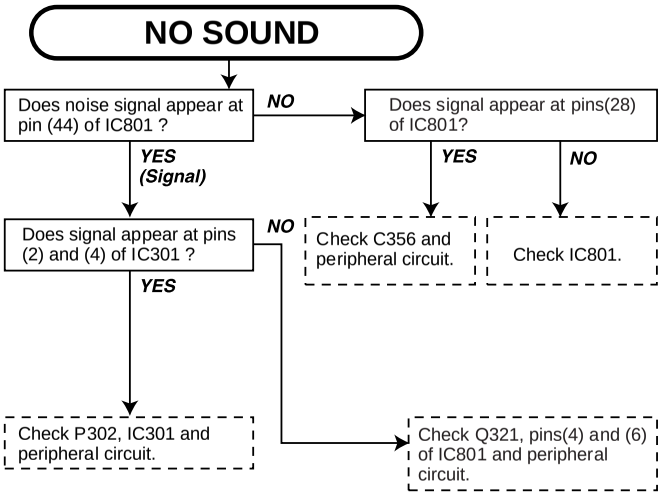
Does noise signal appear at pin (44) of IC801 ?
NO
Does signal appear at pins(28) of IC801?
YES (Signal)
YES
NO
Does signal appear at pins (2) and (4) of IC301 ?
NO
Check C356 and peripheral circuit.
Check IC801.
YES
Check P302, IC301 and peripheral circuit.
Check Q321, pins(4) and (6) of IC801 and peripheral circuit.

TROUBLE SHOOTING TABLE (Continued)

NEITHER VERTICAL NOR HORIZONTAL SYNCHRONIZATION

CIRCUIT TO BE CHECKED:
- Sync. Separator Circuit.



DEFECTIVE VERTICAL AMP. AND VERTICAL LINEARITY

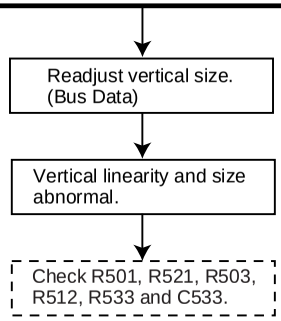

NO VERTICAL SCAN

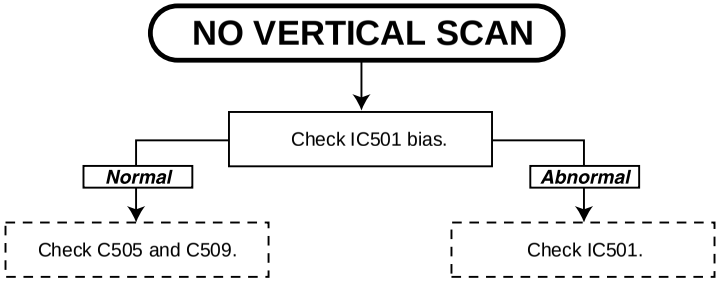

TROUBLE SHOOTING TABLE (Continued)

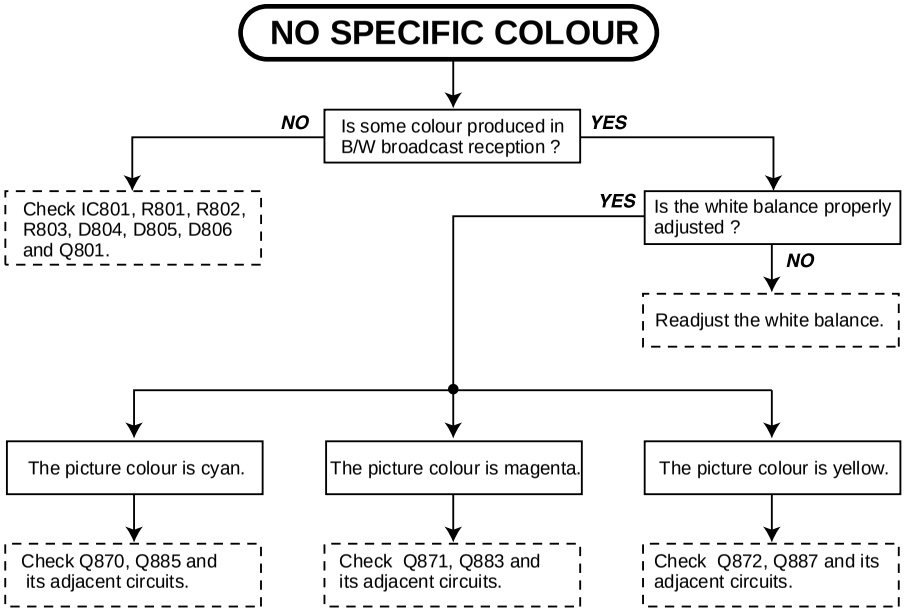
NO SPECIFIC COLOUR
NO
Is some colour produced in B/W broadcast reception ?
YES
Check IC801, R801, R802, R803, D804, D805, D806 and Q801.
YES
Is the white balance properly adjusted ?
NO
Readjust the white balance.
The picture colour is cyan.
The picture colour is magenta.
The picture colour is yellow.
Check Q870, Q885 and its adjacent circuits.
Check Q871, Q883 and its adjacent circuits.
Check Q872, Q887 and its adjacent circuits.

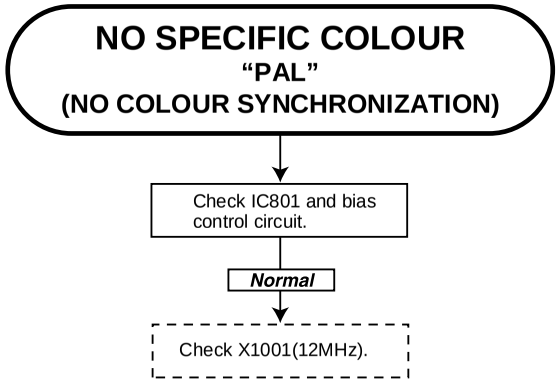

SOLID STATE DEVICE BASE DIAGRAM

TOP VIEW



AT24W04

D601A



B709A

18-2



IX3368CE

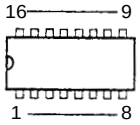

TDA9821

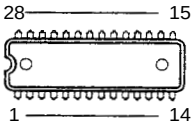

M52797SP



2SC2735

SIDE VIEW

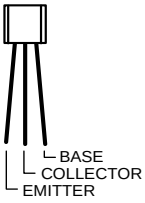

TX0110BM
TX0124BM

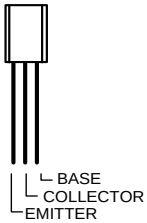

2SC3207
2PC1815

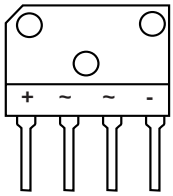

DX0111CE

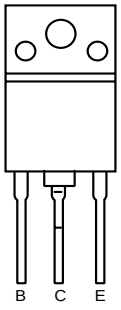

2SD2586

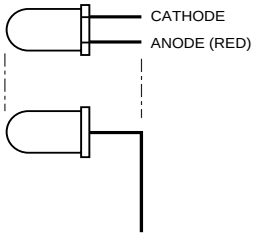

PX0013PE



KA7808A

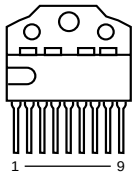

AN7523

18-1

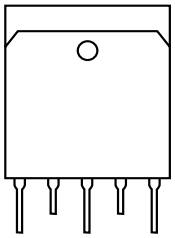

STRG5653

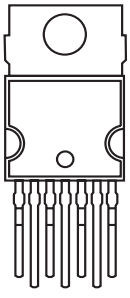

STV9302A

WAVEFORMS

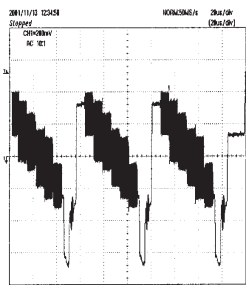	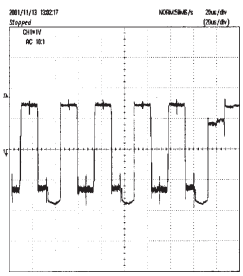	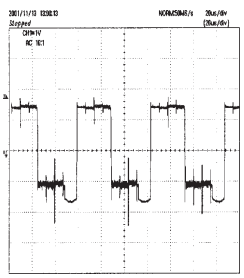	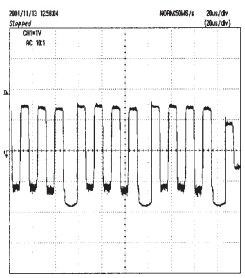	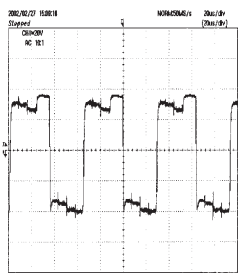
1) 1.04 Vp-p	2) 3.32 Vp-p	3) 3.40 Vp-p	4) 3.12 Vp-p	5) 84.8 Vp-p
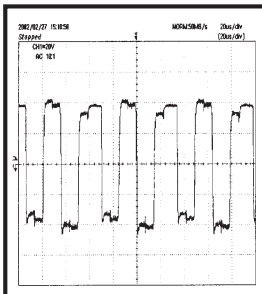	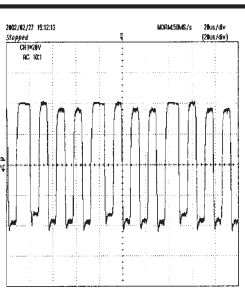	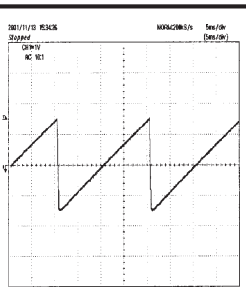	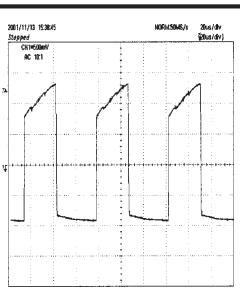	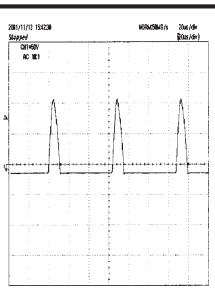
6) 90.4 Vp-p	7) 88.6 Vp-p	8) 3.16 Vp-p	9) 2.44 Vp-p	10) 122 Vp-p
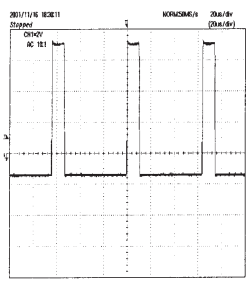	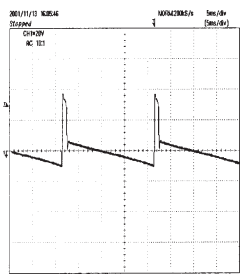	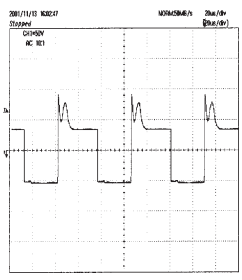	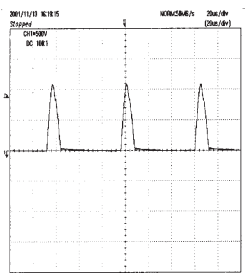	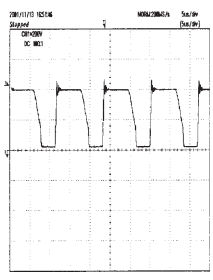
11) 8.72 Vp-p	12) 47.2 Vp-p	13) 140 Vp-p	14) 1200kVp-p	15) 528 Vp-p
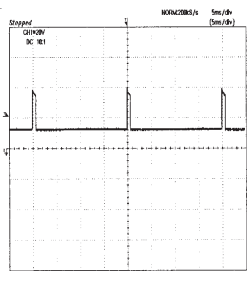	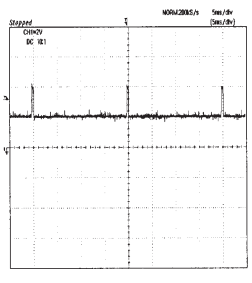			
16) 27.2 Vp-p (V)	17) 2.00 Vp-p			

CHASSIS LAYOUT

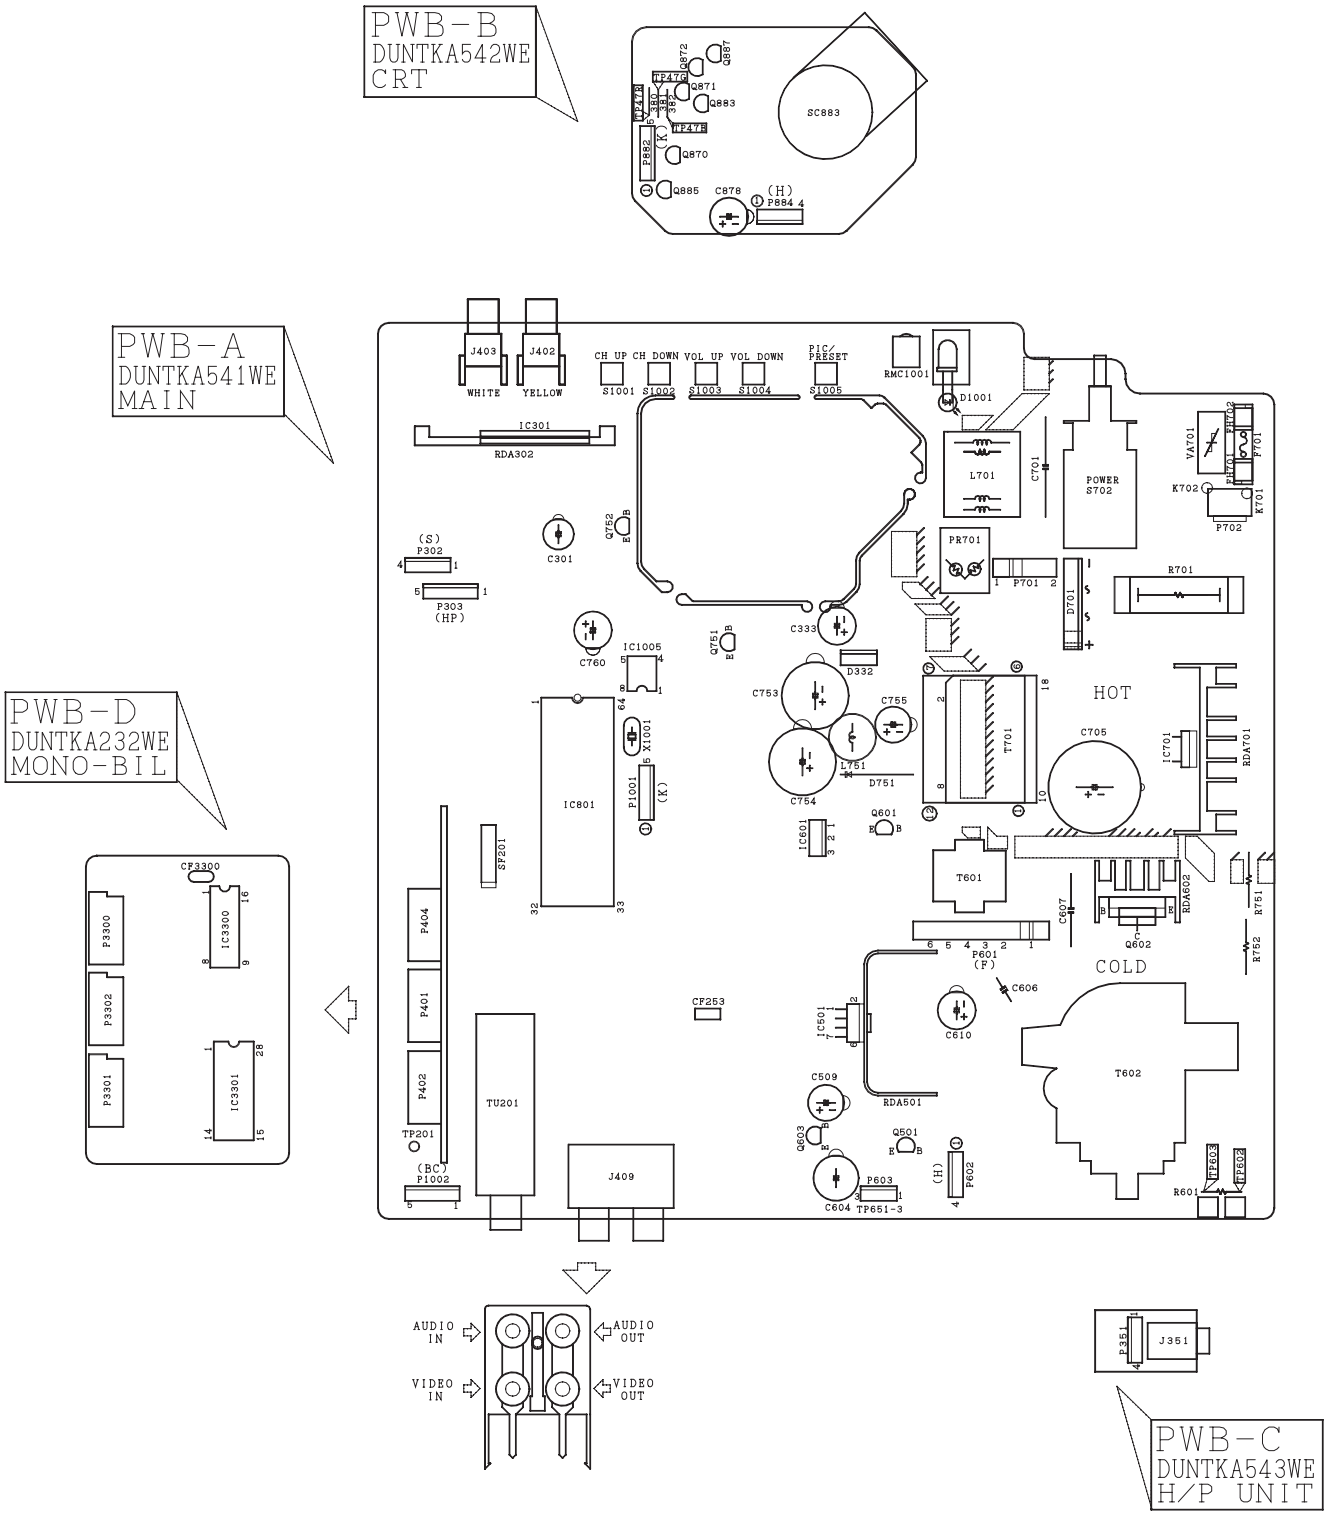

BLOCK DIAGRAM
CRT UNIT

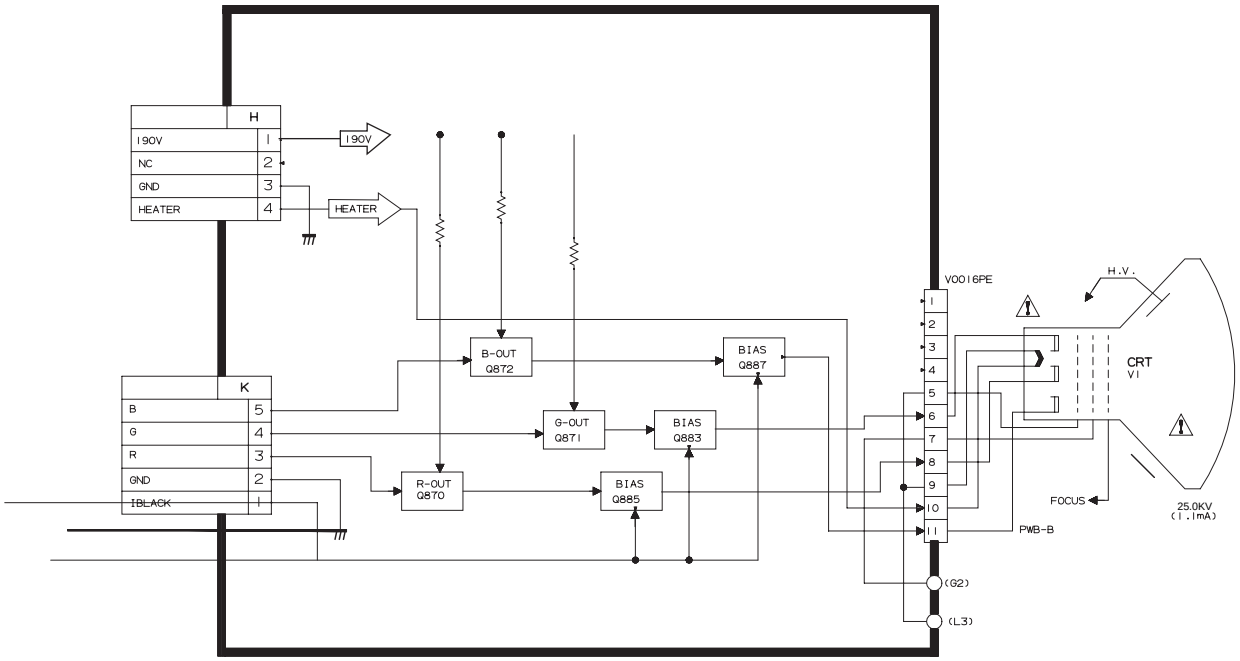

BLOCK DAIAGRAM

MAIN UNIT

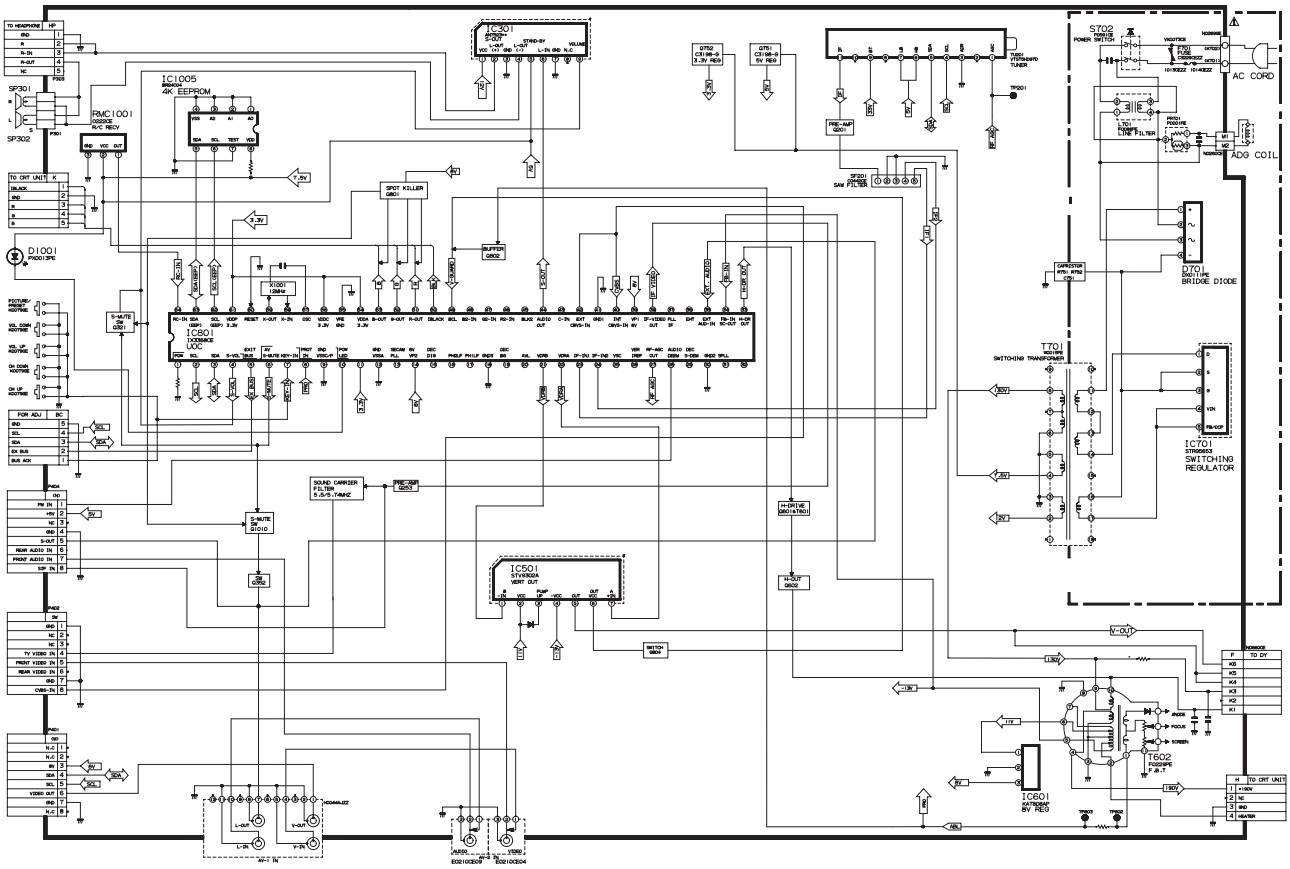

HEADPHONE UNIT

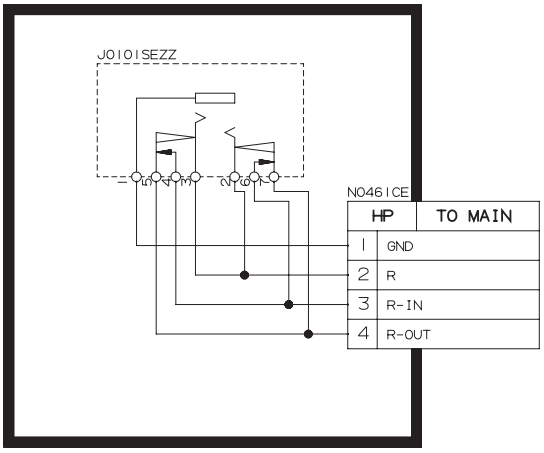

MONO BILINGUAL UNIT

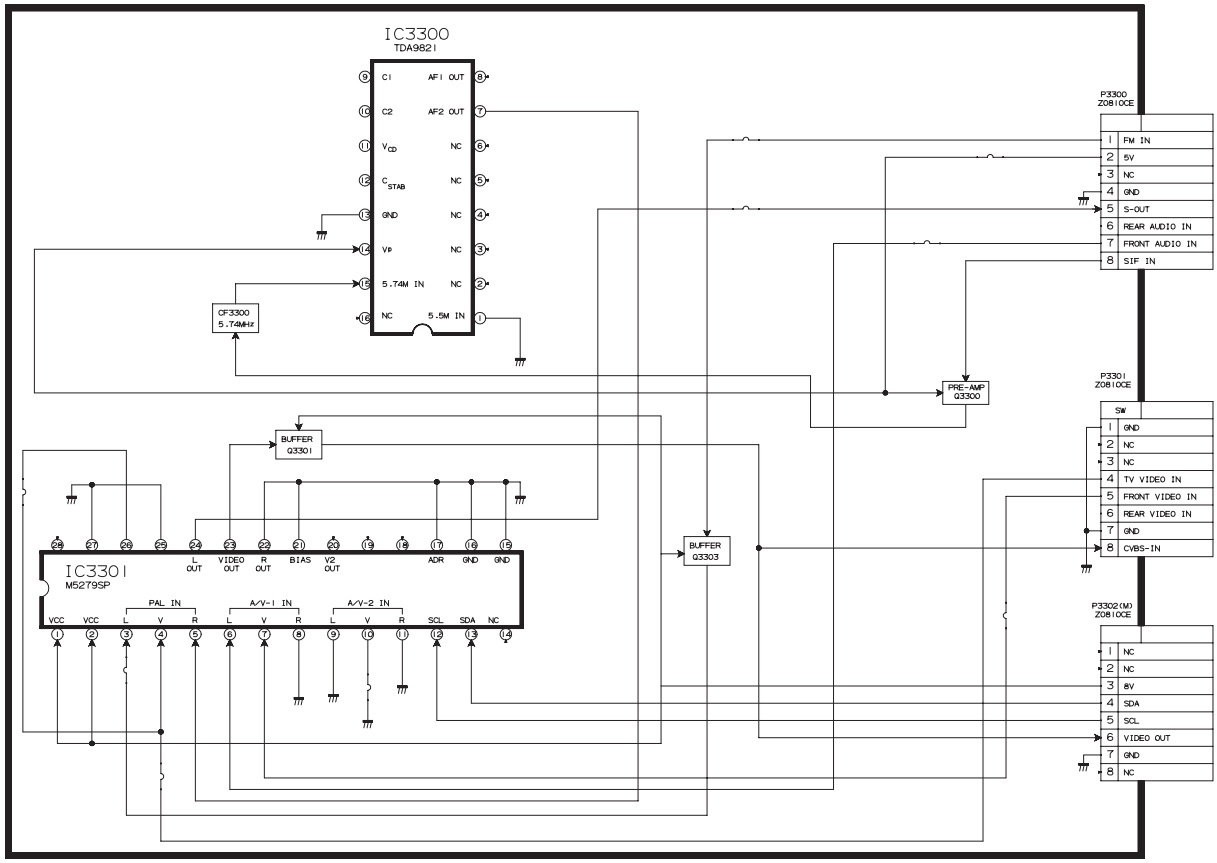

DESCRIPTION OF SCHEMATIC DIAGRAM

SAFETY NOTES:

1. *DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.*
2. *SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.*

IMPORTANT SAFETY NOTICE:

PARTS MARKED WITH "⚠" ( ) ARE IMPORTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

SERVICE PRECAUTION:

THE AREA ENCLOSED BY THIS LINE (▬ ▬ ▬) IS DIRECTLY CONNECTED WITH AC MAINS VOLTAGE.
WHEN SERVICING THE AREA, CONNECT AN ISOLATING TRANSFORMER BETWEEN TV RECEIVER AND AC LINE TO ELIMINATE HAZARD OF ELECTRIC SHOCK.

NOTES:

1. *The unit of resistance "ohm" is omitted. (K = 1000 ohms, M = Meg ohm).*
2. *All resistors are 1/16 watt, unless otherwise noted.*
3. *All capacitors are μF, unless therwise noted. (P = μμF).*

VOLTAGE MEASUREMENT CONDITIONS:

1. *Voltage in parenthesis measured with no Signal.*
2. *Voltages without parenthesis measured with PAL Colour-Signal.*
3. *All the voltages in each point are measured with high impedence volt-meter.*

WAVEFORM MEASUREMENT CONDITIONS:

1. *Colour bar generator signal of 2.0V peak to peak applied at Base of Video Buffer Amp. Q254.*
2. *Approximately 4.0 V AGC bias.*

SCHEMATIC DIAGRAM
MAIN UNIT

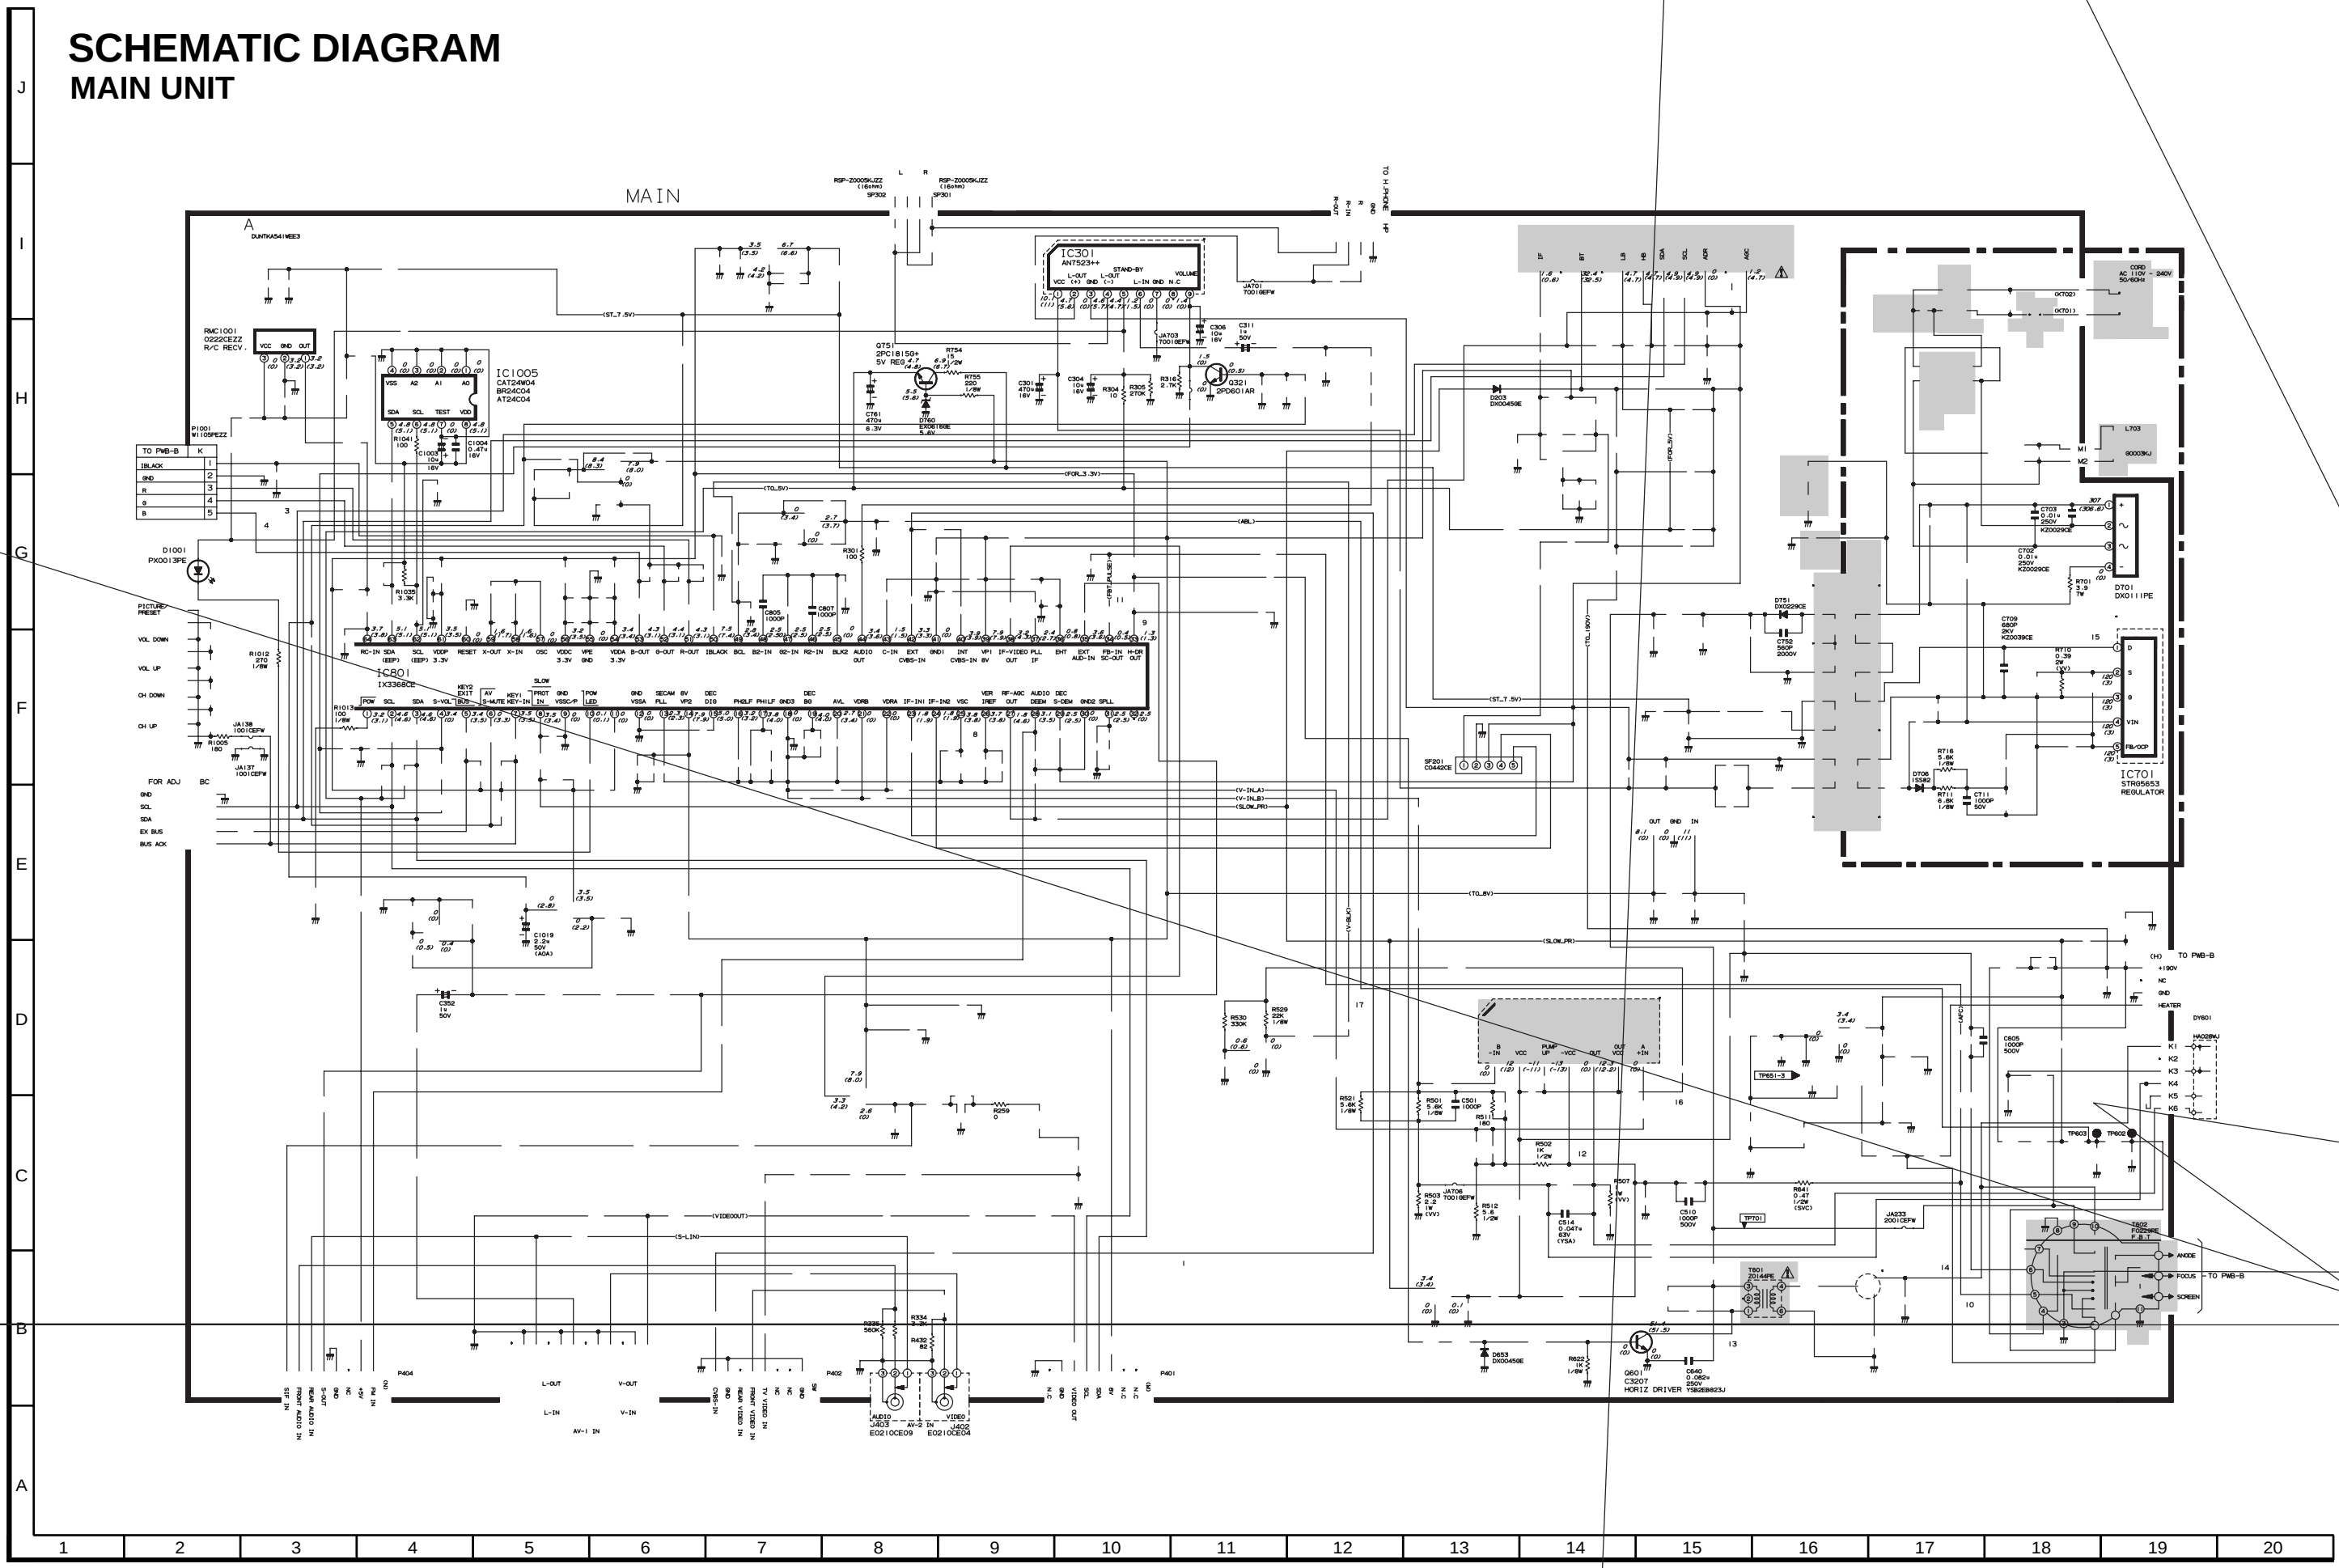
MAIN
IC301
AN7523++
IC1005
CAT24W04
BR24C04
AT24C04
RMC1001
0222CEZZ
R/C RECV.
IC801
IX3368CE
IC701
STR65653
REGULATOR
D701
DX0111PE
T601
Z0144PE
T602
F0229PE
F.B.T
Q601
C3207
HORIZ DRIVER
Q751
2PC1815G+
5V REG
Q321
2PD601AR
TO PWB-B
TO H.PHONE
CORD
AC 110V - 240V
50/60Hz
ANODE
FOCUS
SCREEN
AV-1 IN
AV-2 IN
FOR ADJ
PICTURE/PRESET
VOL DOWN
VOL UP
CH DOWN
CH UP

CRT UNIT

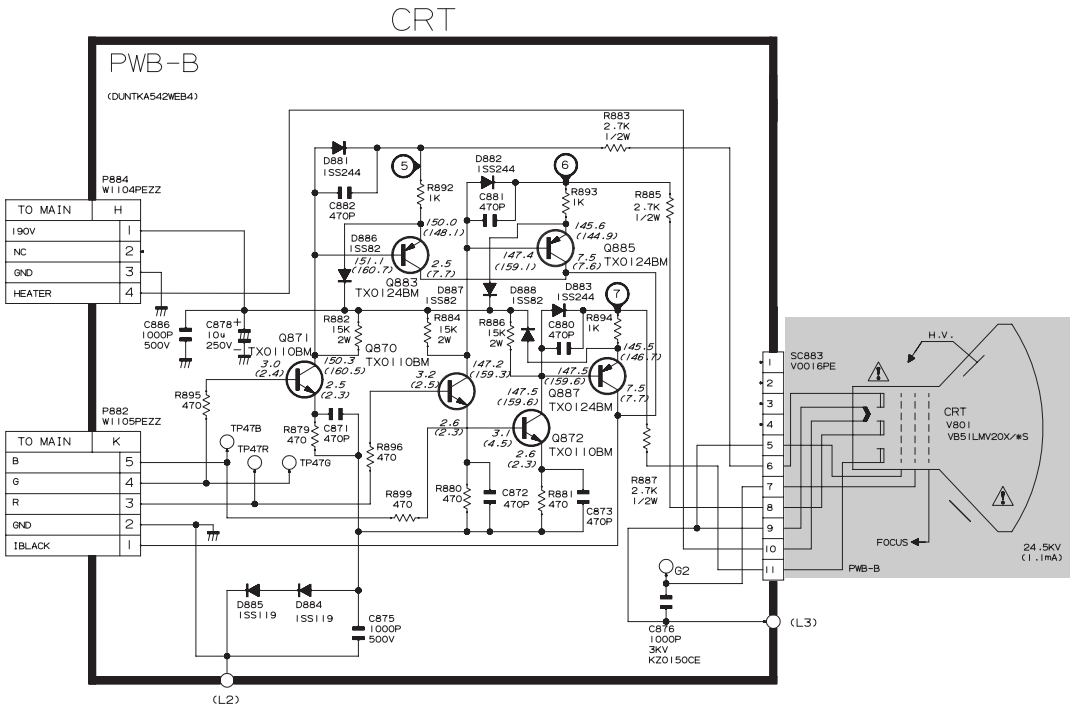

HEADPHONE UNIT

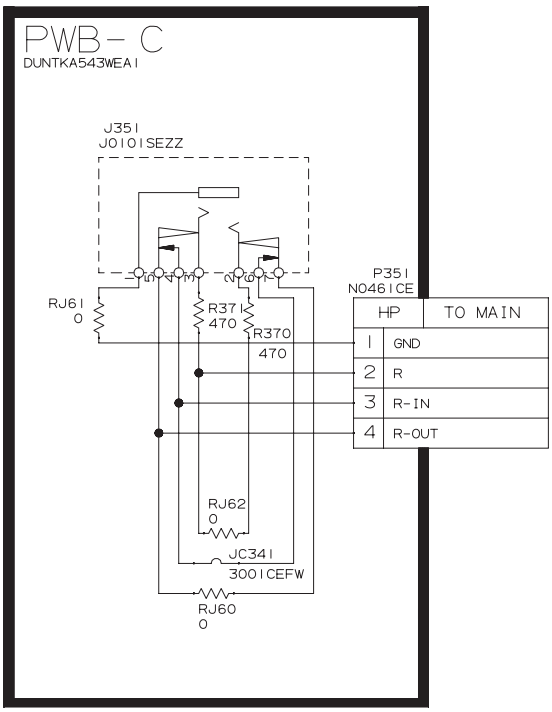

MONO BILINGUAL UNIT

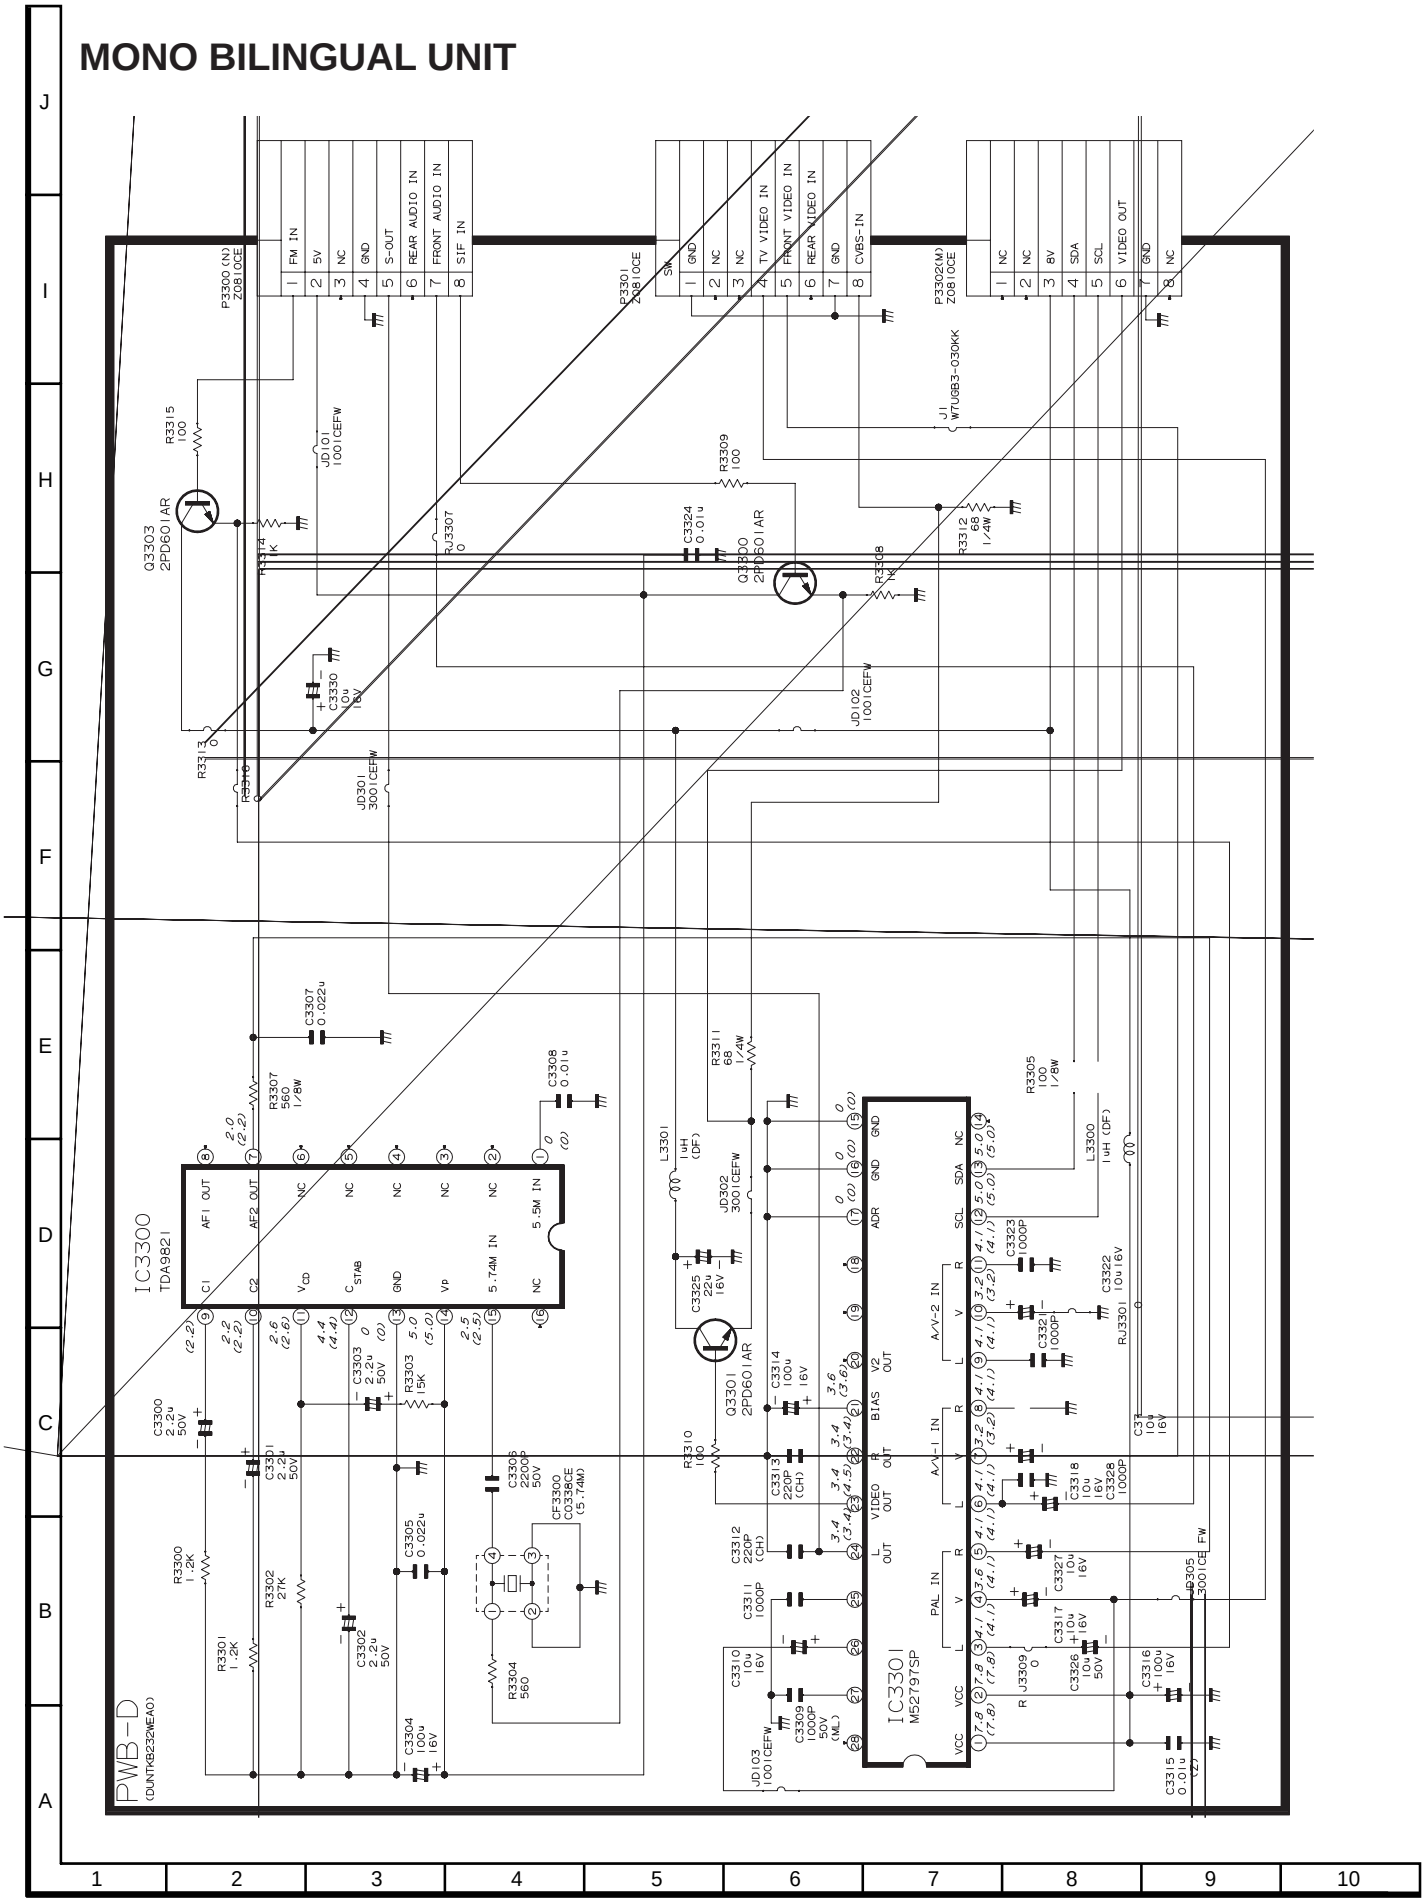

21GT22

PRINTED WIRING BOARD ASSEMBLIES

PWB-A: MAIN UNIT (Copper Side)

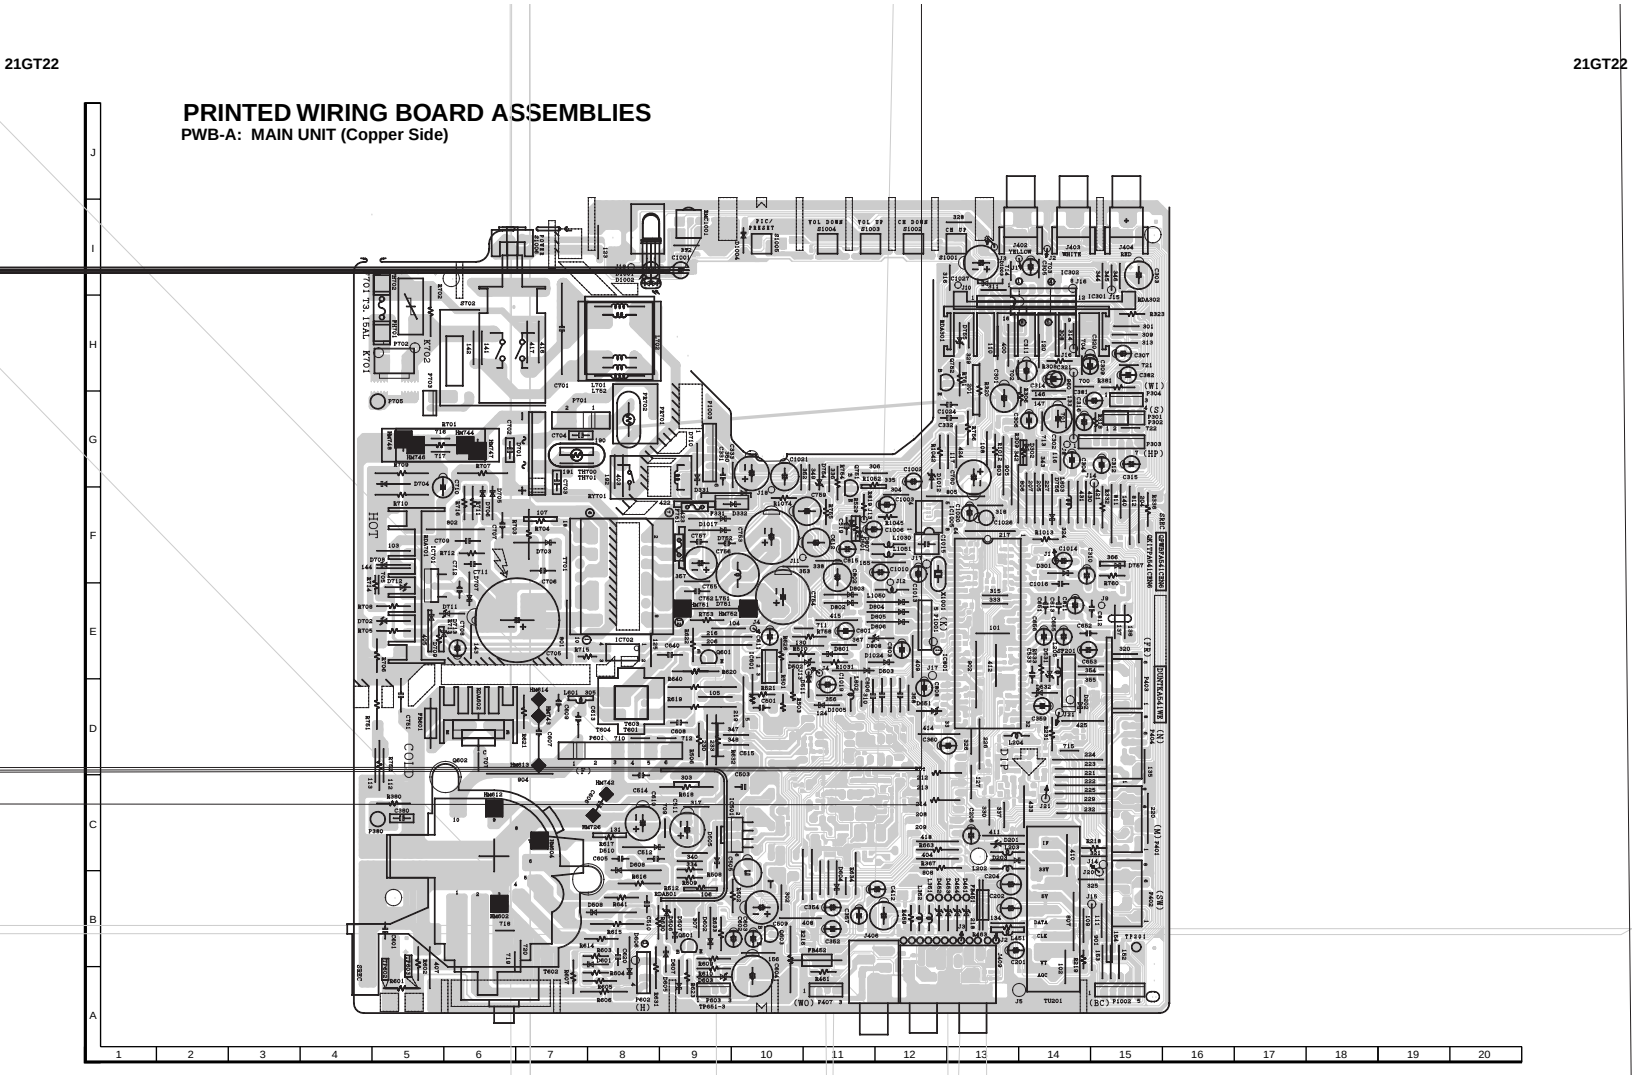

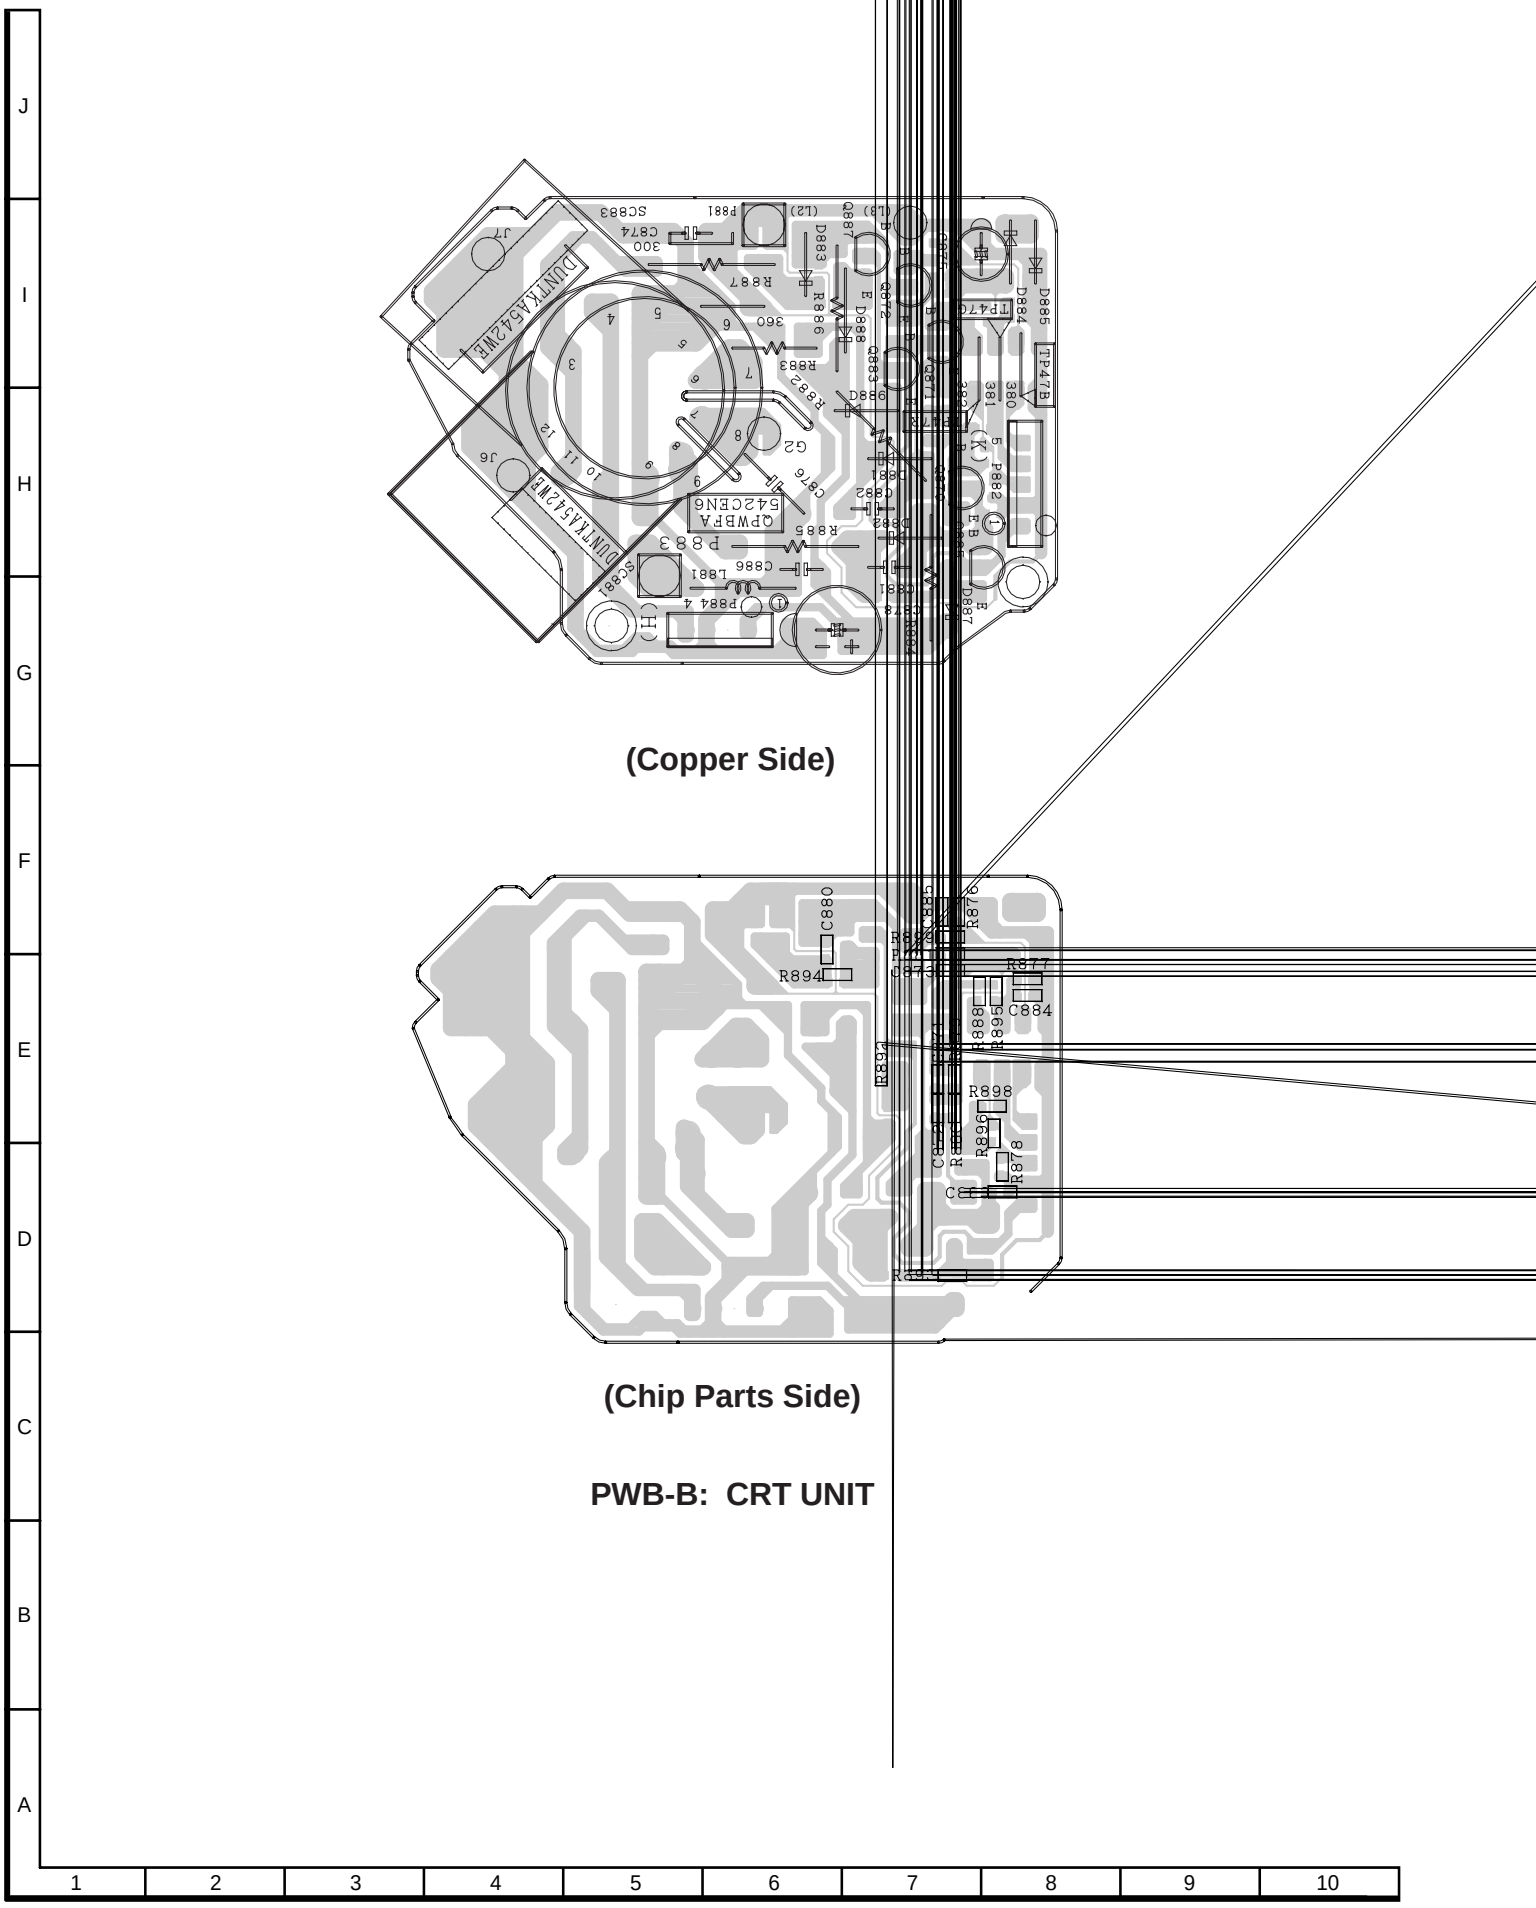

(Copper Side)

(Chip Parts Side)

PWB-B: CRT UNIT

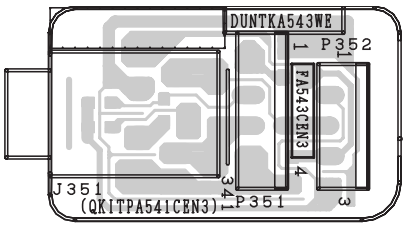

(Copper Side)

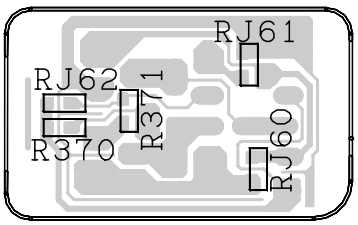

(Chip Side)

PWB-C: HEADPHONE UNIT

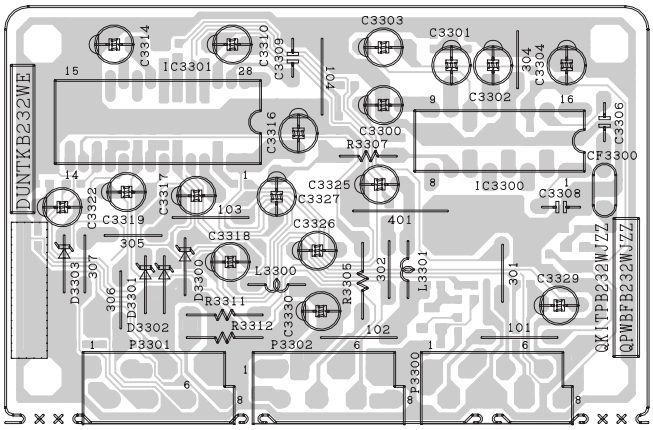

(Copper Side)

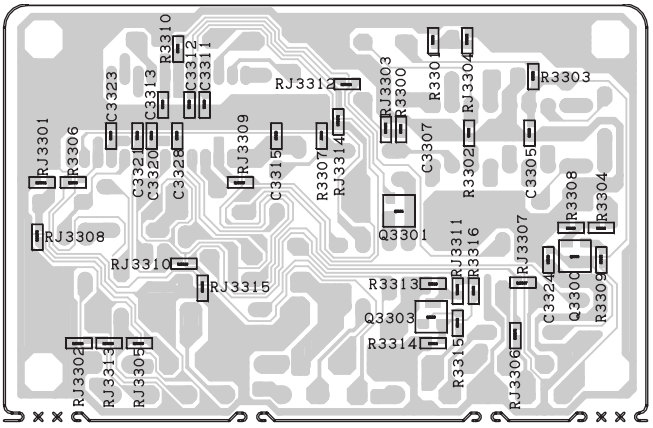

(Chip Side)

PWB-D: MONO BILINGUAL UNIT

REPLACEMENT PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "⚠" in the Replacement Parts Lists.
The use of a substitute replacement part which does not have the same safety characteristics as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. **MODEL NUMBER**
2. **REF. NO.**
3. **PART NO.**
4. **DESCRIPTION**

MARK ★ : SPARE PARTS-DELIVERY SECTION.

Ref. No.	Part No.	★	Description	Code
PICTURE TUBE				
⚠ V801	VB51LMV20X/∗S	J	Picture Tube	
⚠ L703	RCiLG0003KJZZ	J	Degaussing Coil	
⚠ DY601	RCiLHA028WJZZ	J	Deflection Yoke	
	QEARC2115CEZZ	J	Ground-Part	
	LHLDW0003PEKZ	J	ADG Coil Holder	AB
	MSPRT0001PEFJ	J	CRT Spring	AC
	PMAGF3046CEZZ	J	Magnet	AF
PRINTED WIRING BOARD ASSEMBLIES *(NOT REPLACEMENT ITEM)*				
PWB-A	DUNTKA541WEE3	-	Main Unit	—
PWB-B	DUNTKA542WEB4	-	CRT Unit	—
PWB-C	DUNTKA543WEA1	-	Headphone Unit	—
PWB-D	DUNTKB232WEA0	-	Mono-Billingual Unit	—
DUNTKA541WEE3 PWB-A MAIN UNIT				
TUNER				
NOTE: THE PARTS HERES SHOWN ARE SUPPLIED AS AN ASSEMBLY NOT INDEPENDENTLY.				
⚠ TU201	VTUVTST5HD970	J	VHF Tuner	AY
INTEGRATED CIRCUITS				
IC301	VHiAN7523++-1	J	AN7523	AH
⚠ IC501	VHiSTV9302A-1	J	STV9302A, Vert Out	
IC601	VHiKA7808AP-1	J	KA7808AP	AE
IC701	VHiSTRG5653-1	J	STRG5653, Regulator	AQ
IC801	RH-iX3368CEN6	J	IX3368CE	BE
IC1005	VHiCAT24W04-1	J	CAT24W04	
TRANSISTORS				
Q201	VS2SC2735//1E∗	J	2SC2735	AC
Q253	VS2PD601AR/-1∗	J	2PD601AR	AB
Q321	VS2PD601AR/-1∗	J	2PD601AR	AB
Q352	VS2PD601AR/-1∗	J	2PD601AR	AB
Q501	VS2PC1815G+-1+	J	2PC1815G+	AC
Q601	VS2SC3207//-1+	J	2SC3207	AC
Q602	VS2SD2586//1E	J	2SD2586	AM
Q603	VS2PC1815G+-1+	J	2PC1815G+	AC
Q751	VS2PC1815G+-1+	J	2PC1815G+, 5V Reg	AC
Q752	VS2PC1815G+-1+	J	2PC1815G+, 3.3V Reg	AC
Q801	VS2PB709AR/-1∗	J	2PB709AR	AB
Q802	VS2PB709AR/-1∗	J	2PB709AR	AB
Q804	VS2PD601AR/-1∗	J	2PD601AR	AB
Q1010	VS2PD601AR/-1∗	J	2PD601AR	AB
DIODES AND LED				
D201	RH-EX0676GEZZ∗	J	Zener, EX0676GE	AA
D203	RH-DX0045GEZZ∗	J	DX0045GE	
D301	VHD1SS119//-1∗	J	1SS119	AA
D302	VHD1SS119//-1∗	J	1SS119	AA
D332	RH-DX0445CEZZ	J	DX0445CE	AL
D503	RH-DX0045GEZZ∗	J	DX0045GE	
D505	RH-DX0441CEZZ∗	J	DX0441CE	AC
D506	RH-EX0630GEZZ∗	J	Zener, EX0630GE	AA
D507	RH-DX0045GEZZ∗	J	DX0045GE	
D508	RH-DX0131CEZZ∗	J	DX0131CE	AC
D509	RH-EX0660GEZZ∗	J	Zener, EX0660GE	
D531	RH-EX0627GEZZ∗	J	Zener, EX0627GE	AA
D532	RH-EX0627GEZZ∗	J	Zener, EX0627GE	AA
D601	RH-DX0048GEZZ∗	J	DX0048GE	
D602	VHD1SS244//-1∗	J	1SS244	AB
D603	RH-EX0667GEZZ∗	J	Zener, EX0667GE	AA
D604	VHD1SS119//-1∗	J	1SS119	AA
D606	RH-DX0131CEZZ∗	J	DX0131CE	AC
D607	RH-DX0045GEZZ∗	J	DX0045GE	
D608	RH-DX0468CEZZ	J	DX0468CE	AE
D651	RH-EX0627GEZZ∗	J	Zener, EX0627GE	AA
D652	RH-EX0253TAZZ∗	J	Zener, EX0253TA	
D653	RH-DX0045GEZZ∗	J	DX0045GE	
D701	RH-DX0111PEZZ	J	DX0111PE	AG
D705	VHD1SS82///1A∗	J	1SS82	AC
D706	VHD1SS82///1A∗	J	1SS82	AC
D707	VHD1SS82///1A∗	J	1SS82	AC
D751	RH-DX0229CEZZ	J	DX0229CE	AF
D752	RH-DX0131CEZZ∗	J	DX0131CE	AC
D755	RH-EX0603GEZZ∗	J	Zener, EX0603GE	AA
D760	RH-EX0616GEZZ∗	J	Zener, EX0616GE	AA
D801	VHD1SS119//-1∗	J	1SS119	AA
D802	RH-DX0045GEZZ∗	J	DX0045GE	
D803	RH-DX0045GEZZ∗	J	DX0045GE	
D804	RH-DX0045GEZZ∗	J	DX0045GE	
D805	RH-DX0045GEZZ∗	J	DX0045GE	
D806	RH-DX0045GEZZ∗	J	DX0045GE	
D808	RH-EX0610GEZZ∗	J	Zener, EX0610GE	AA
D1001	RH-PX0013PEZZ	J	PhotoDiode	AC
D1003	VHD1SS119//-1∗	J	1SS119	AA
D1004	VHD1SS119//-1∗	J	1SS119	AA
D1007	RH-EX0263TAZZ∗	J	Zener, EX0263TA	
D1012	RH-EX0611GEZZ∗	J	Zener, EX0611GE	AA
D1018	RH-EX0263TAZZ∗	J	Zener, EX0263TA	
D1019	RH-EX0263TAZZ∗	J	Zener, EX0263TA	
D1024	VHD1SS119//-1∗	J	1SS119	AA
VA701	RH-VX0073CEZZ	J	Varistor	AD
PACKAGED CIRCUITS				
PR701	RMPTP0001PEZZ	J	Packaged Circuit	AN
X1001	RCRSB0300CEZZ	J	Crystal, CRSB0300CE	AF
FILTERS				
CF253	RFiLC0335CEZZ	J	Filter, FiLC0335CE	
SF201	RFiLC0442CEZZ	J	Filter, FiLC0442CE	AL
COILS				
L202	VP-DF270K0000∗	J	Peaking, 27µH 0.1	AB
L203	VP-DF270K0000∗	J	Peaking, 27µH 0.1	AB
L204	VP-XF1R2K0000∗	J	Peaking, 1.2µH 0.1	AB
L253	VP-XF100K0000∗	J	Peaking, 10µH 0.1	AB
⚠ L701	RCiLF0096PEZZ	J	Coil,	AF
L751	RCiLP0225CEZZ	J	Coil,	AF
L802	VP-DF100K0000∗	J	Peaking, 10µH 0.1	AB
L803	VP-DF100K0000∗	J	Peaking, 10µH 0.1	AB
L1030	VP-DF100K0000∗	J	Peaking, 10µH 0.1	AB

Ref. No.	Part No.	★	Description	Code
L1050	VP-DF100K0000∗	J	Peaking, 10μH 0.1	AB
L1051	VP-DF100K0000∗	J	Peaking, 10μH 0.1	AB
L1030	VP-DF100K0000	R	Peaking, 10μH	AB
L1050	VP-DF100K0000	R	Peaking, 10μH	AB
L1051	VP-DF100K0000	R	Peaking, 10μH	AB
	TRANSFORMERS			
⚠ T601	RTRNZ0144PEZZ	J	Transformer	AE
⚠ T602	RTRNF0229PEZZ	J	H-Volt Transformer	AY
⚠ T701	RTRNW0015PEZZ	J	Transformer	AL
	CAPACITORS			
C201	VCEA0A1CW476M+	J	47 16V Electrolytic	AB
C202	VCEA0A1AW337M+	J	330 10V Electrolytic	AC
C203	VCKYCY1HF103Z∗	J	0.01 50V Ceramic	AA
C204	VCEA0A0JW477M+	J	470 6.3V Electrolytic	AC
C205	VCKYCY1HF103Z∗	J	0.01 50V Ceramic	AA
C206	VCEA0A1HW106M+	J	10 50V Electrolytic	AB
C207	VCKYCY1HF103Z∗	J	0.01 50V Ceramic	AA
C208	VCKYCY1HF103Z∗	J	0.01 50V Ceramic	AA
C209	VCKYCY1HF103Z∗	J	0.01 50V Ceramic	AA
C210	VCKYCY1HF103Z∗	J	0.01 50V Ceramic	AA
C231	VCKYCY1HF223Z∗	J	0.022 50V Ceramic	
C232	VCKYCY1HB821K∗	J	820p 50V Ceramic	
C233	VCKYCY1HB472K∗	J	4700p 50V Ceramic	AA
C234	VCKYCY1EF104Z∗	J	0.1 25V Ceramic	AA
C251	VCKYCY1HF223Z∗	J	0.022 50V Ceramic	
C252	VCEA0A1CW107M+	J	100 16V Electrolytic	AC
C301	VCEA0A1CW477M+	J	470 16V Electrolytic	AC
C304	VCEA0A1CW106M+	J	10 16V Electrolytic	AB
C306	VCEA0A1CW106M+	J	10 16V Electrolytic	AB
C310	VCEA0A1HW105M+	J	1 50V Electrolytic	AB
C311	VCEA0A1HW105M+	J	1 50V Electrolytic	AB
C312	VCEA0A1HW224M+	J	0.22 50V Electrolytic	AB
C316	VCEA0A1CW107M+	J	100 16V Electrolytic	AC
C331	VCKYPA2HB102K+	J	1000p 500V Ceramic	AA
C332	VCQYTA1HM103J+	J	0.01 50V Mylar	AB
C333	VCEA0A1CW108M	J	1000 16V Electrolytic	AD
C352	VCEA0A1HW105M+	J	1 50V Electrolytic	AB
C354	VCEA0A1HW105M+	J	1 50V Electrolytic	AB
C356	VCKYCY1HB472K∗	J	4700p 50V Ceramic	AA
C359	VCEA0A1CW106M+	J	10 16V Electrolytic	AB
C360	VCE9GA1HW225M+	J	2.2 50V Electrolytic	AB
C409	VCKYCY1CF474Z∗	J	0.47 16V Ceramic	AB
C410	VCKYCY1CF474Z∗	J	0.47 16V Ceramic	AB
C411	VCKYCY1HB102K∗	J	1000p 50V Ceramic	AA
C412	VCEA0A1CW477M+	J	470 16V Electrolytic	AC
C501	VCKYPA1HB102K+	J	1000p 50V Ceramic	AA
C504	VCKYCY1HB103K∗	J	0.01 50V Ceramic	AA
C505	VCEA0A1HW107M+	J	100 50V Electrolytic	AB
C507	VCKYCY1HB103K∗	J	0.01 50V Ceramic	AA
C508	VCFYSA1JB224J+	J	0.22 63V	AD
C509	VCEA0A1CW477M+	J	470 16V Electrolytic	AC
C510	VCKYPA2HB102K+	J	1000p 500V Ceramic	AA
C514	VCFYSA1JB473J+	J	0.047 63V	AC
C529	VCKYCY1CB823K∗	J	0.082 16V Ceramic	AH
C531	VCKYCY1HB102K∗	J	1000p 50V Ceramic	AA
C532	VCKYCY1HB102K∗	J	1000p 50V Ceramic	AA
C533	VCQYTA1HM104J+	J	0.1 50V Mylar	AB
C601	VCQYTA1HM563J+	J	0.056 50V Mylar	AB
C602	VCEA0A1HW475M+	J	4.7 50V Electrolytic	AB
C603	VCEA0A1HW105M+	J	1 50V Electrolytic	AB
C604	VCEA0A2EW106M	J	10 250V Electrolytic	AD
C605	VCKYPA2HB102K+	J	1000p 500V Ceramic	AA
C606	VCFPVC2DB474J	J	0.47 200V Metallized Polypro Film	AE
C607	VCFPVC3CA802H	J	8000p 1600V Metallized Polypro Film	
C608	VCKYPA2HB102K+	J	1000p 500V Ceramic	AA
C610	VCEA0A1CW108M	J	1000 16V Electrolytic	AD
C611	VCEA0A1EW476M+	J	47 25V Electrolytic	AB
C612	VCEA0A1CW477M+	J	470 16V Electrolytic	AC
C620	VCKYPA2HB102K+	J	1000p 500V Ceramic	AA
C640	VCFYSB2EB823J	J	0.082 250V M.Polyester	AD
C651	VCQYTA1HM222J+	J	2200p 50V Mylar	AA
C652	VCQYTA1HM472J+	J	4700p 50V Mylar	AB

Ref. No.	Part No.	★	Description	Code
C653	VCEA0A1HW105M+	J	1 50V Electrolytic	AB
C654	VCKYCY1HF223Z∗	J	0.022 50V Ceramic	
C655	VCEA0A1HW106M+	J	10 50V Electrolytic	AB
C656	VCEA0A1HW474M+	J	0.47 50V Electrolytic	AB
C657	VCKYCY1EF104Z∗	J	0.1 25V Ceramic	AA
C658	VCKYCY1EF104Z∗	J	0.1 25V Ceramic	AA
⚠ C701	RC-FZ031SCEZZ	J	0.1 275V Metallized Polypro Film	AD
C702	RC-KZ0029CEZZ+	J	0.01 250V Ceramic	AC
C703	RC-KZ0029CEZZ+	J	0.01 250V Ceramic	AC
C704	RC-KZ0029CEZZ+	J	0.01 250V Ceramic	AC
C705	RC-EZA097WJZZ	J	220 400V Electrolytic	
C709	RC-KZ0039CEZZ	J	680p 2kV Ceramic	AB
C710	VCEA0A1HW476M+	J	47 50V Electrolytic	AB
C711	VCKYPA1HB102K+	J	1000p 50V Ceramic	AA
C712	VCKYPA1HB471K+	J	470p 50V Ceramic	AA
⚠ C751	RC-KZ0102GEZZ	J	680p AC250V Ceramic	AE
C752	VCKYPH3DB561K	J	560p 2000V Ceramic	AC
C753	RC-EZ0776CEZZ	J	100 160V Electrolytic	AF
C754	RC-EZA069WJZZ	J	33 160V Electrolytic	AE
C755	VCEA0A1CW108M	J	1000 16V Electrolytic	AD
C756	VCQYTA1HM103J+	J	0.01 50V Mylar	AB
C759	VCEA0A0JW477M+	J	470 6.3V Electrolytic	AC
C760	VCEA0A0JW228M	J	2200 6.3V Electrolytic	AD
C801	VCEA0A1HW105M+	J	1 50V Electrolytic	AB
C803	VCEA0A1CW107M+	J	100 16V Electrolytic	AC
C804	VCKYCY1HB222K∗	J	2200p 50V Ceramic	AA
C805	VCKYD41HB102K∗	J	1000p 50V Ceramic	AA
C806	VCKYD41HB102K∗	J	1000p 50V Ceramic	AA
C807	VCKYD41HB102K∗	J	1000p 50V Ceramic	AA
C808	VCEA0A1CW107M+	J	100 16V Electrolytic	AC
C809	VCKYCY1CF474Z∗	J	0.47 16V Ceramic	AB
C810	VCKYCY1CF474Z∗	J	0.47 16V Ceramic	AB
C811	VCEA0A1CW107M+	J	100 16V Electrolytic	AC
C812	VCFYFA1HA224J+	J	0.22 50V Mylar	AB
C813	VCFYFA1HA224J+	J	0.22 50V Mylar	AB
C814	VCKYCY1HB471K∗	J	470p 50V Ceramic	AB
C816	VCKYCY1HB471K∗	J	470p 50V Ceramic	AB
C1001	VCEA0A0JW107M+	J	100 6.3V Electrolytic	AB
C1002	VCEA0A0JW107M+	J	100 6.3V Electrolytic	AB
C1003	VCEA0A1CW106M+	J	10 16V Electrolytic	AB
C1004	VCKYCY1CF474Z∗	J	0.47 16V Ceramic	AB
C1005	VCKYCY1CF474Z∗	J	0.47 16V Ceramic	AB
C1006	VCEA0A1CW106M+	J	10 16V Electrolytic	AB
C1008	VCCCCY1HH330J∗	J	33p 50V Ceramic	AA
C1009	VCCCCY1HH330J∗	J	33p 50V Ceramic	AA
C1010	VCEA0A0JW107M+	J	100 6.3V Electrolytic	AB
C1011	VCKYCY1CF474Z∗	J	0.47 16V Ceramic	AB
C1012	VCKYCY1CF474Z∗	J	0.47 16V Ceramic	AB
C1013	VCEA0A0JW107M+	J	100 6.3V Electrolytic	AB
C1014	VCEA0A1CW106M+	J	10 16V Electrolytic	AB
C1016	VCQYTA1HM104J+	J	0.1 50V Mylar	AB
C1018	VCKYCY1HB221K∗	J	220p 50V Ceramic	AA
C1019	VCEA0A1HW225M+	J	2.2 50V Electrolytic	AB
C1024	VCQYTA1HM104J+	J	0.1 50V Mylar	AB
	RESISTORS			
RJ2	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ4	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ9	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ10	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ13	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ14	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ15	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ16	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ17	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ19	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ21	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ24	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ26	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ28	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ32	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ33	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ35	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ37	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ38	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA

Ref. No.	Part No.	★		Description		Code
RJ41	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ42	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ43	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ46	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ48	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ49	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ51	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ52	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ53	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ56	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ71	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ73	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ75	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ76	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ77	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ78	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ80	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ81	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ82	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ84	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ85	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ86	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ87	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
RJ89	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
R201	VRS-CY1JF101J∗	J	100	1/16W	Metal Oxide	AA
R202	VRS-CY1JF101J∗	J	100	1/16W	Metal Oxide	AA
R205	VRS-CY1JF680J∗	J	68	1/16W	Metal Oxide	AA
R206	VRS-CY1JF122J∗	J	1.2k	1/16W	Metal Oxide	AA
R207	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R208	VRS-CY1JF122J∗	J	1.2k	1/16W	Metal Oxide	AA
R209	VRS-CY1JF392J∗	J	3.9k	1/16W	Metal Oxide	AA
R216	VRS-VV3LB223J	J	22k	3W	Metal Oxide	AB
R219	VRD-RA2BE392J∗	J	3.9k	1/8W	Carbon	AA
R220	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R230	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
R231	VRD-RA2BE681J∗	J	680	1/8W	Carbon	AA
R232	VRS-CY1JF272J∗	J	2.7k	1/16W	Metal Oxide	AA
R233	VRS-CY1JF102J∗	J	1k	1/16W	Metal Oxide	AA
R234	VRS-CY1JF391J∗	J	390	1/16W	Metal Oxide	AA
R257	VRS-CY1JF181J∗	J	180	1/16W	Metal Oxide	AA
R258	VRS-CY1JF151J∗	J	150	1/16W	Metal Oxide	AA
R259	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
R262	VRS-CY1JF561J∗	J	560	1/16W	Metal Oxide	AA
R263	VRS-CY1JF561J∗	J	560	1/16W	Metal Oxide	AA
R301	VRS-CY1JF101J∗	J	100	1/16W	Metal Oxide	AA
R304	VRS-CY1JF100J∗	J	10	1/16W	Metal Oxide	AA
R305	VRS-CY1JF274J∗	J	270k	1/16W	Metal Oxide	AA
R310	VRS-CY1JF473J∗	J	47k	1/16W	Metal Oxide	AA
R311	VRS-CY1JF473J∗	J	47k	1/16W	Metal Oxide	AA
R313	VRS-CY1JF102J∗	J	1k	1/16W	Metal Oxide	AA
R314	VRS-CY1JF472J∗	J	4.7k	1/16W	Metal Oxide	AA
R315	VRS-CY1JF272J∗	J	2.7k	1/16W	Metal Oxide	AA
R316	VRS-CY1JF272J∗	J	2.7k	1/16W	Metal Oxide	AA
R318	VRD-RA2BE680J∗	J	68	1/8W	Carbon	AA
R334	VRS-CY1JF332J∗	J	3.3k	1/16W	Metal Oxide	AA
R335	VRS-CY1JF564J∗	J	560k	1/16W	Metal Oxide	AA
R353	VRS-CY1JF681J∗	J	680	1/16W	Metal Oxide	AA
R359	VRS-CY1JF102J∗	J	1k	1/16W	Metal Oxide	AA
R360	VRS-CY1JF103J∗	J	10k	1/16W	Metal Oxide	AA
R361	VRS-CY1JF104J∗	J	100k	1/16W	Metal Oxide	AA
R364	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
R366	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
R430	VRS-CY1JF000J∗	J	0	1/16W	Metal Oxide	AA
R432	VRS-CY1JF820J∗	J	82	1/16W	Metal Oxide	AA
R458	VRS-CY1JF103J∗	J	10k	1/16W	Metal Oxide	AA
R459	VRD-RA2BE680J∗	J	68	1/8W	Carbon	AA
R501	VRD-RA2BE562J∗	J	5.6k	1/8W	Carbon	AA
R502	VRD-RM2HD102J∗	J	1k	1/2W	Carbon	AA
R503	VRN-VV3AB2R2J	J	2.2	1W	Metal Film	AA
R504	VRS-CY1JF181J∗	J	180	1/16W	Metal Oxide	AA
R505	VRS-CY1JF102J∗	J	1k	1/16W	Metal Oxide	AA
R506	VRS-VV3AB391J	J	390	1W	Metal Oxide	AA
R507	VRN-VV3AB1R0J	J	1	1W	Metal Film	AA
R508	VRD-RA2BE153J∗	J	15k	1/8W	Carbon	AA
R509	VRD-RA2BE153J∗	J	15k	1/8W	Carbon	AA
R511	VRS-CY1JF181J∗	J	180	1/16W	Metal Oxide	AA
R512	VRD-RM2HD5R6J∗	J	5.6	1/2W	Carbon	

Ref. No.	Part No.	★		Description		Code
R521	VRD-RA2BE562J∗	J	5.6k	1/8W	Carbon	AA
R529	VRD-RA2BE223J∗	J	22k	1/8W	Carbon	AA
R530	VRS-CY1JF334J∗	J	330k	1/16W	Metal Oxide	AA
R531	VRS-CY1JF101J∗	J	100	1/16W	Metal Oxide	AA
R532	VRS-CY1JF101J∗	J	100	1/16W	Metal Oxide	AA
R533	VRD-RA2BE393J∗	J	39k	1/8W	Carbon	AA
R601	VRS-SV2HC102J	J	1k	1/2W	Metal Oxide	AA
R602	VRD-RA2BE393J∗	J	39k	1/8W	Carbon	AA
R603	VRD-RA2BE223J∗	J	22k	1/8W	Carbon	AA
R604	VRD-RA2BE393J∗	J	39k	1/8W	Carbon	AA
R605	VRD-RM2HD823J∗	J	82k	1/2W	Carbon	
R606	VRN-VV3DB1R2J	J	1.2	2W	Metal Film	AA
R607	VRD-RM2HD270J∗	J	27	1/2W	Carbon	AA
R609	VRD-RA2BE154J∗	J	150k	1/8W	Carbon	AA
R610	VRD-RA2BE102G∗	J	1k	1/8W	Carbon	
R611	VRS-CY1JF102J∗	J	1k	1/16W	Metal Oxide	AA
R612	VRS-CY1JF123J∗	J	12k	1/16W	Metal Oxide	AA
R613	VRS-CY1JF103J∗	J	10k	1/16W	Metal Oxide	AA
R614	VRS-SV2HC100J	J	10	1/2W	Metal Oxide	AA
R615	VRS-VV3DB682J	J	6.8k	2W	Metal Oxide	AA
R616	VRN-VV3ABR47J	J	0.47	1W	Metal Film	AA
R618	VRS-VV3DB391J	J	390	2W	Metal Oxide	AA
R619	VRS-VV3LB562J	J	5.6k	3W	Metal Oxide	AB
R620	VRS-VV3AB472J	J	4.7k	1W	Metal Oxide	AA
R622	VRD-RA2BE102J∗	J	1k	1/8W	Carbon	AA
R623	VRD-RM2HD184J∗	J	180k	1/2W	Carbon	AA
R624	VRS-CY1JF472J∗	J	4.7k	1/16W	Metal Oxide	AA
R625	VRN-VV3DB4R7J	J	4.7	2W	Metal Film	AB
R626	VRD-RM2HD470J∗	J	47	1/2W	Carbon	AA
R633	VRD-RA2BE333J∗	J	33k	1/8W	Carbon	AA
R634	VRD-RA2BE103J∗	J	10k	1/8W	Carbon	AA
R641	VRN-SV2HCR47J	J	0.47	1/2W	Metal Film	AA
R651	VRS-CY1JF223J∗	J	22k	1/16W	Metal Oxide	AA
R652	VRS-CY1JF102J∗	J	1k	1/16W	Metal Oxide	AA
R653	VRS-CY1JF822J∗	J	8.2k	1/16W	Metal Oxide	AA
R654	VRS-CY1JF273J∗	J	27k	1/16W	Metal Oxide	AA
R655	VRS-CY1JF391J∗	J	390	1/16W	Metal Oxide	AA
R656	VRS-CY1JF100J∗	J	10	1/16W	Metal Oxide	AA
R658	VRD-RA2BE101J∗	J	100	1/8W	Carbon	AA
R663	VRD-RA2BE101J∗	J	100	1/8W	Carbon	AA
R701	VRW-KQ3NC3R9K	J	3.9	7W	Cement	AE
R704	VRN-SV2HC1R0J	J	1	1/2W	Metal Film	AA
R707	VRS-VV3DB104J	J	100k	2W	Metal Oxide	AB
R708	VRD-RA2BE681J∗	J	680	1/8W	Carbon	AA
R709	VRN-VV3DBR47J	J	0.47	2W	Metal Film	AB
R710	VRN-VV3DBR39J	J	0.39	2W	Metal Film	AA
R711	VRD-RA2BE682J∗	J	6.8k	1/8W	Carbon	AA
R712	VRD-RA2BE152J∗	J	1.5k	1/8W	Carbon	AA
R716	VRD-RA2BE562J∗	J	5.6k	1/8W	Carbon	AA
⚠ R751	VRC-UA2HG825K∗	J	8.2M	1/2W	Solid	AA
⚠ R752	VRC-UA2HG825K∗	J	8.2M	1/2W	Solid	AA
R753	VRD-RM2HD124J∗	J	120k	1/2W	Carbon	AA
R754	VRD-RM2HD150J∗	J	15	1/2W	Carbon	AA
R755	VRD-RA2BE221J∗	J	220	1/8W	Carbon	AA
R756	VRD-RM2HD220J∗	J	22	1/2W	Carbon	AA
R757	VRS-CY1JF331J∗	J	330	1/16W	Metal Oxide	AA
R765	VRS-CY1JF331J∗	J	330	1/16W	Metal Oxide	AA
R801	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R802	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R803	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R804	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R805	VRS-CY1JF822J∗	J	8.2k	1/16W	Metal Oxide	AA
R806	VRS-CY1JF123J∗	J	12k	1/16W	Metal Oxide	AA
R807	VRS-CY1JF103J∗	J	10k	1/16W	Metal Oxide	AA
R808	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R809	VRD-RA2BE224J∗	J	220k	1/8W	Carbon	AA
R812	VRS-CY1JF101J∗	J	100	1/16W	Metal Oxide	AA
R813	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R1001	VRS-CY1JF221J∗	J	220	1/16W	Metal Oxide	AA
R1002	VRS-CY1JF331J∗	J	330	1/16W	Metal Oxide	AA
R1003	VRS-CY1JF471J∗	J	470	1/16W	Metal Oxide	AA
R1004	VRS-CY1JF821J∗	J	820	1/16W	Metal Oxide	AA
R1005	VRS-CY1JF181J∗	J	180	1/16W	Metal Oxide	AA
R1011	VRS-CY1JF101J∗	J	100	1/16W	Metal Oxide	AA
R1012	VRD-RA2BE271J∗	J	270	1/8W	Carbon	
R1013	VRD-RA2BE101J∗	J	100	1/8W	Carbon	AA
R1014	VRS-CY1JF101J∗	J	100	1/16W	Metal Oxide	AA

Ref. No.	Part No.	★	Description	Code
R1015	VRS-CY1JF332J∗	J	3.3k 1/16W Metal Oxide	AA
R1016	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1017	VRS-CY1JF332J∗	J	3.3k 1/16W Metal Oxide	AA
R1019	VRS-CY1JF392J∗	J	3.9k 1/16W Metal Oxide	AA
R1020	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1021	VRS-CY1JF153J∗	J	15k 1/16W Metal Oxide	AA
R1022	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1023	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1024	VRS-CY1JF122J∗	J	1.2k 1/16W Metal Oxide	AA
R1025	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1026	VRS-CY1JF224J∗	J	220k 1/16W Metal Oxide	AD
R1028	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1030	VRS-CY1JF102J∗	J	1k 1/16W Metal Oxide	AA
R1031	VRD-RA2BE562J∗	J	5.6k 1/8W Carbon	AA
R1032	VRS-CY1JF332J∗	J	3.3k 1/16W Metal Oxide	AA
R1034	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1035	VRS-CY1JF332J∗	J	3.3k 1/16W Metal Oxide	AA
R1036	VRS-CY1JF332J∗	J	3.3k 1/16W Metal Oxide	AA
R1037	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1038	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1039	VRS-CY1JF223J∗	J	22k 1/16W Metal Oxide	AA
R1040	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1041	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1042	VRD-RA2BE101J∗	J	100 1/8W Carbon	AA
R1046	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1048	VRS-CY1JF102J∗	J	1k 1/16W Metal Oxide	AA
R1050	VRS-CY1JF392J∗	J	3.9k 1/16W Metal Oxide	AA
R1051	VRS-CY1JF683J∗	J	68k 1/16W Metal Oxide	AA
R1072	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA
R1073	VRS-CY1JF101J∗	J	100 1/16W Metal Oxide	AA

BALUN

FB601	RBLN-0091GEZZ∗	J	Balun, BLN-0091GE	AB

SWITCHES

⚠ S702	QSW-PA006WJZZ	J	Switch	
S1001	QSW-K0003AJZZ+	J	Switch, CH Up	AB
S1002	QSW-K0003AJZZ+	J	Switch, CH Down	AB
S1003	QSW-K0003AJZZ+	J	Switch, VOL Up	AB
S1004	QSW-K0003AJZZ+	J	Switch, VOL Down	AB
S1005	QSW-K0003AJZZ+	J	Switch, Picture/Preset	AB

MISCELLANEOUS PARTS

	LHLDP1066PE00	J	Holder	AC
⚠ ACC701	QACCZ3008KJSA	J	AC Cord	
⚠ F701	QFS-C3229CEZZ	J	Fuse, T3. 15A 250V	AD
⚠ FH701	QFSHD1013CEZZ+	J	Fuse Holder	AC
⚠ FH702	QFSHD1014CEZZ+	J	Fuse Holder	AC
J402	QJAKE0210CE04	J	Jack, 3Pin	AC
J403	QJAKE0210CE09	J	Jack, 3Pin	AC
J409	QJAKH0044AJZZ	J	Jack, 12Pin	AE
P302	QPLGN0461CEZZ	J	Plug, 4Pin	AB
P303	QPLGN0561CEZZ	J	Plug, 4Pin	AB
P601	QPLGN0660CEZZ	J	Plug, 6Pin	AC
P602	LHLDW1104PEZZ	J	Holder	AB
P603	QPLGN0341CEZZ	J	Plug, 3Pin	AA
P701	QPLGN0260CEZZ	J	Plug, 2Pin	AC
P702	QPLGA0201PEZZ	J	Plug, 2Pin	
P1001	LHLDW1105PEZZ	J	Holder	AB
P1002	QPLGN0561CEZZ	J	Plug, 5Pin	AB
RDA302	PRDAR0340PEFW	J	Heat Sink, IC301	AE
RDA501	PRDAR0118GJFW	J	Heat Sink, IC501	AD
RDA602	PRDAR0224PEFW	J	Heat Sink, Q602	AF
RDA701	PRDAR0298PEFW	J	Heat Sink, IC701	AF
RMC1001	RRMCU0222CEZZ	J	Remote Receiver	AL
TP201	QLUGP0102PEZZ	J	Lug	AA

DUNTKA542WEB4
PWB-B CRT UNIT

TRANSISTORS

Q870	RH-TX0110BMZZ+	J	TX0110BM	AC
Q871	RH-TX0110BMZZ+	J	TX0110BM	AC
Q872	RH-TX0110BMZZ+	J	TX0110BM	AC
Q883	RH-TX0124BMZZ+	J	TX0124BM	AC
Q885	RH-TX0124BMZZ+	J	TX0124BM	AC
Q887	RH-TX0124BMZZ+	J	TX0124BM	AC

DIODES

D881	VHD1SS244//-1∗	J	1SS244	AB
D882	VHD1SS244//-1∗	J	1SS244	AB
D883	VHD1SS244//-1∗	J	1SS244	AB
D884	VHD1SS119//-1∗	J	1SS119	AA
D885	VHD1SS119//-1∗	J	1SS119	AA
D886	VHD1SS82///1A∗	J	1SS82	AC
D887	VHD1SS82///1A∗	J	1SS82	AC
D888	VHD1SS82///1A∗	J	1SS82	AC

CAPACITORS

C871	VCCCCY1HH471J∗	J	470p 50V Ceramic	AA
C872	VCCCCY1HH471J∗	J	470p 50V Ceramic	AA
C873	VCCCCY1HH471J∗	J	470p 50V Ceramic	AA
C875	VCKYPA2HB102K+	J	1000p 500V Ceramic	AA
C876	RC-KZ0150CEZZ	J	1000p 3kV Ceramic	AB
C878	VCEA0A2EW106M+	J	10 250V Electrolytic	AD
C880	VCCCCY1HH471J∗	J	470p 50V Ceramic	AA
C881	VCKYPA1HB471K+	J	470p 50V Ceramic	AA
C882	VCKYPA1HB471K+	J	470p 50V Ceramic	AA
C886	VCKYPA2HB102K+	J	1000p 500V Ceramic	AA

RESISTORS

R879	VRS-CY1JF471J∗	J	470 1/16W Metal Oxide	AA
R880	VRS-CY1JF471J∗	J	470 1/16W Metal Oxide	AA
R881	VRS-CY1JF471J∗	J	470 1/16W Metal Oxide	AA
R882	VRS-VV3DB153J	J	15k 2W Metal Oxide	AA
R883	VRD-RM2HD272J∗	J	2.7k 1/2W Carbon	AA
R884	VRS-VV3DB153J	J	15k 2W Metal Oxide	AA
R885	VRD-RM2HD272J∗	J	2.7k 1/2W Carbon	AA
R886	VRS-VV3DB153J	J	15k 2W Metal Oxide	AA
R887	VRD-RM2HD272J∗	J	2.7k 1/2W Carbon	AA
R892	VRS-CY1JF102J∗	J	1k 1/16W Metal Oxide	AA
R893	VRS-CY1JF102J∗	J	1k 1/16W Metal Oxide	AA
R894	VRS-CY1JF102J∗	J	1k 1/16W Metal Oxide	AA
R895	VRS-CY1JF471J∗	J	470 1/16W Metal Oxide	AA
R896	VRS-CY1JF471J∗	J	470 1/16W Metal Oxide	AA
R899	VRS-CY1JF471J∗	J	470 1/16W Metal Oxide	AA

MISCELLANEOUS PARTS

⚠ SC883	QSOCV0016PEZZ	J	Socket, 11Pin	AF
P882	LHLDW1105PEZZ	J	Holder, 5Pin	AB
P884	LHLDW1104PEZZ	J	Holder, 4Pin	AB

DUNTKA543WEA1
PWB-C HEADPNONE UNIT

RESISTORS

RJ60	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ61	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
RJ62	VRS-CY1JF000J∗	J	0 1/16W Metal Oxide	AA
R370	VRS-CY1JF471J∗	J	470 1/16W Metal Oxide	AA
R371	VRS-CY1JF471J∗	J	470 1/16W Metal Oxide	AA

MISCELLANEOUS PARTS

J351	QJAKJ0101SEZZ	J	Jack, 7Pin	AE
P351	QPLGN0461CEZZ	J	Plug, 4Pin	AB

DUNTKB232WEA0
PWB-D MONO-BILLINGUAL UNIT

INTEGRATED CIRCUITS

IC3300	VHiTDA9821/-1	J	TDA9821	AR
IC3301	VHiM52797SP-1	J	M52797SP	AP

Ref. No.	Part No.	★	Description			Code
	TRANSISTORS					
Q3300	VS2PD601AR/-1✱	J	2PD601AR			AB
Q3301	VS2PD601AR/-1✱	J	2PD601AR			AB
Q3303	VS2PD601AR/-1✱	J	2PD601AR			AB
	FILTER					
CF3300	RFiLC0338CEZZ	J	Filter, FiLC0338CE			AG
	COILS					
L3300	VP-DF1R0K0000✱	J	Peaking, 1µH	0.1		AB
L3301	VP-DF1R0K0000✱	J	Peaking, 1µH	0.1		AB
	CAPACITORS					
C3300	VCEA0A1HW225M+	J	2.2	50V	Electrolytic	AB
C3301	VCEA0A1HW225M+	J	2.2	50V	Electrolytic	AB
C3302	VCEA0A1HW225M+	J	2.2	50V	Electrolytic	AB
C3303	VCEA0A1HW225M+	J	2.2	50V	Electrolytic	AB
C3304	VCEA0A1CW107M+	J	100	16V	Electrolytic	AC
C3305	VCKYCY1HF223Z✱	J	0.022	50V	Ceramic	
C3306	VCKYPA1HB222K+	J	2200p	50V	Ceramic	AA
C3307	VCKYCY1HB223K✱	J	0.022	50V	Ceramic	
C3308	VCKYPA1HF103Z+	J	0.01	50V	Ceramic	AA
C3309	VCQYTA1HM102J+	J	1000p	50V	Mylar	AB
C3310	VCEA0A1CW106M+	J	10	16V	Electrolytic	AB
C3311	VCKYCY1HB102K✱	J	1000p	50V	Ceramic	AA
C3312	VCCCCY1HH221J✱	J	220p	50V	Ceramic	AA
C3313	VCCCCY1HH221J✱	J	220p	50V	Ceramic	AA
C3314	VCEA0A1CW107M+	J	100	16V	Electrolytic	AC
C3315	VCKYCY1HF103Z✱	J	0.01	50V	Ceramic	AA
C3316	VCEA0A1CW107M+	J	100	16V	Electrolytic	AC
C3317	VCEA0A1CW106M+	J	10	16V	Electrolytic	AB
C3318	VCEA0A1CW106M+	J	10	16V	Electrolytic	AB
C3319	VCEA0A1CW106M+	J	10	16V	Electrolytic	AB
C3320	VCKYCY1HB102K✱	J	1000p	50V	Ceramic	AA
C3321	VCKYCY1HB102K✱	J	1000p	50V	Ceramic	AA
C3322	VCEA0A1CW106M+	J	10	16V	Electrolytic	AB
C3323	VCKYCY1HB102K✱	J	1000p	50V	Ceramic	AA
C3324	VCKYCY1HF103Z✱	J	0.01	50V	Ceramic	AA
C3325	VCEA0A1CW226M+	J	22	16V	Electrolytic	AB
C3326	VCEA0A1HW106M+	J	10	50V	Electrolytic	AB
C3327	VCEA0A1CW106M+	J	10	16V	Electrolytic	AB
C3328	VCKYCY1HB102K✱	J	1000p	50V	Ceramic	AA
C3330	VCEA0A1CW106M+	J	10	16V	Electrolytic	AB
	RESISTORS					
RJ3301	VRS-CY1JF000J✱	J	0	1/16W	Metal Oxide	AA
RJ3307	VRS-CY1JF000J✱	J	0	1/16W	Metal Oxide	AA
RJ3309	VRS-CY1JF000J✱	J	0	1/16W	Metal Oxide	AA
RJ3312	VRS-CY1JF000J✱	J	0	1/16W	Metal Oxide	AA
RJ3314	VRS-CY1JF000J✱	J	0	1/16W	Metal Oxide	AA
R3300	VRS-CY1JF122J✱	J	1.2k	1/16W	Metal Oxide	AA
R3301	VRS-CY1JF122J✱	J	1.2k	1/16W	Metal Oxide	AA
R3302	VRS-CY1JF273J✱	J	27k	1/16W	Metal Oxide	AA
R3303	VRS-CY1JF153J✱	J	15k	1/16W	Metal Oxide	AA
R3304	VRS-CY1JF561J✱	J	560	1/16W	Metal Oxide	AA
R3305	VRD-RA2BE101J✱	J	100	1/8W	Carbon	AA
R3306	VRS-CY1JF101J✱	J	100	1/16W	Metal Oxide	AA
R3307	VRD-RA2BE561J✱	J	560	1/8W	Carbon	
R3308	VRS-CY1JF102J✱	J	1k	1/16W	Metal Oxide	AA
R3309	VRS-CY1JF101J✱	J	100	1/16W	Metal Oxide	AA
R3310	VRS-CY1JF101J✱	J	100	1/16W	Metal Oxide	AA
R3311	VRD-RA2EE680J✱	J	68	1/4W	Carbon	AA
R3312	VRD-RA2EE680J✱	J	68	1/4W	Carbon	AA
R3313	VRS-CY1JF000J✱	J	0	1/16W	Metal Oxide	AA
R3314	VRS-CY1JF102J✱	J	1k	1/16W	Metal Oxide	AA
R3315	VRS-CY1JF101J✱	J	100	1/16W	Metal Oxide	AA
R3316	VRS-CY1JF000J✱	J	0	1/16W	Metal Oxide	AA
	MISCELLANEOUS PARTS					
P3300	QPLGZ0810CEZZ	J	Plug, 8Pin			AD
P3301	QPLGZ0810CEZZ	J	Plug, 8Pin			AD
P3302	QPLGZ0810CEZZ	J	Plug, 8Pin			AD

Ref. No.	Part No.	★	Description	Code
	MISCELLANEOUS PARTS			
SP301	RSP-Z0005KJZZ	J	Speaker	AQ
SP302	RSP-Z0005KJZZ	J	Speaker	AQ
	QCNW-A230WJZZ	J	Connecting Cord	AD
	QCNW-A500WJZZ	J	Connecting Cord	AD
	QCNW-0026KJZZ	J	Connecting Cord	AF
	QCNW-2452PEZZ	J	Connecting Cord	AE
	SUPPLIED ACCESSORIES			
	ACCESSORIES			
	RRMCG0018KJSA	J	Infrared R-C	AX
	TiNS-A458WJZZ	J	Operation Manual	
	PACKING PARTS *(NOT REPLACEMENT ITEM)*			
	SPAKCA245WJZZ	-	Packing Case	—
	SPAKP0697CEZZ	-	Wrapping Paper	—
	SPAKXA126WJZZ	-	Packing Add.	—
	SPAKXA166WJZZ	-	Packing Add.	—
	SSAKA0230CEZZ	-	Polyethylene Bag	—
	TLABMA181WJZZ	-	Model Label	—
	TLABN0148KJZZ	-	Serial Label	—
	TLABVA093WJZZ	-	Bar Code Label	—
	TLABZA105WJZZ	-	Label	—

Ref. No.	Part No.	★	Description	Code

CABINET PARTS

1	CCABAA134WEA0		Front Cabinet Ass'y	
1-1	Not Avairable	-	Front Cabinet	—
1-2	HBDGB0001KJSC	J	SHARP Badge	AE
1-3	GCOVAA184WJSA	J	RC/LED Cover	
1-4	JBTN-A062WJSA		Control Button	
1-5	JBTN-A063WJSA	J	Power Button	
1-6	MSPRC0005PEFW	J	Power Button Spring	AB
2	CCABB0064WEA0	J	Rear Cabinet Ass'y	
2-1	Not Avairable	-	Rear Cabinet	—

CABINET PARTS LOCATION

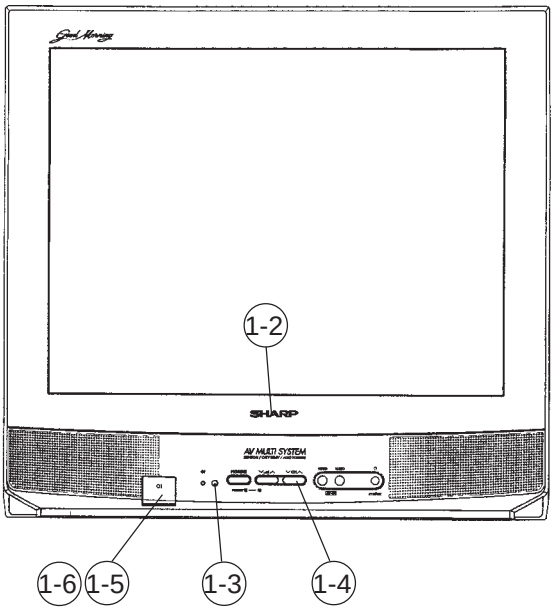

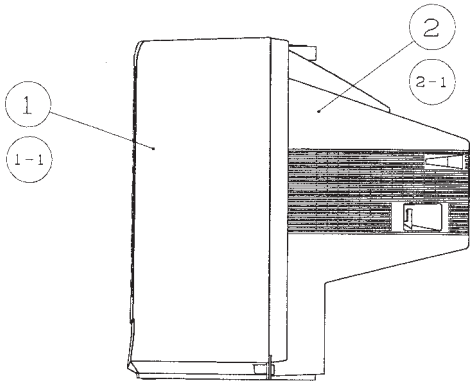

PACKING OF THE SET

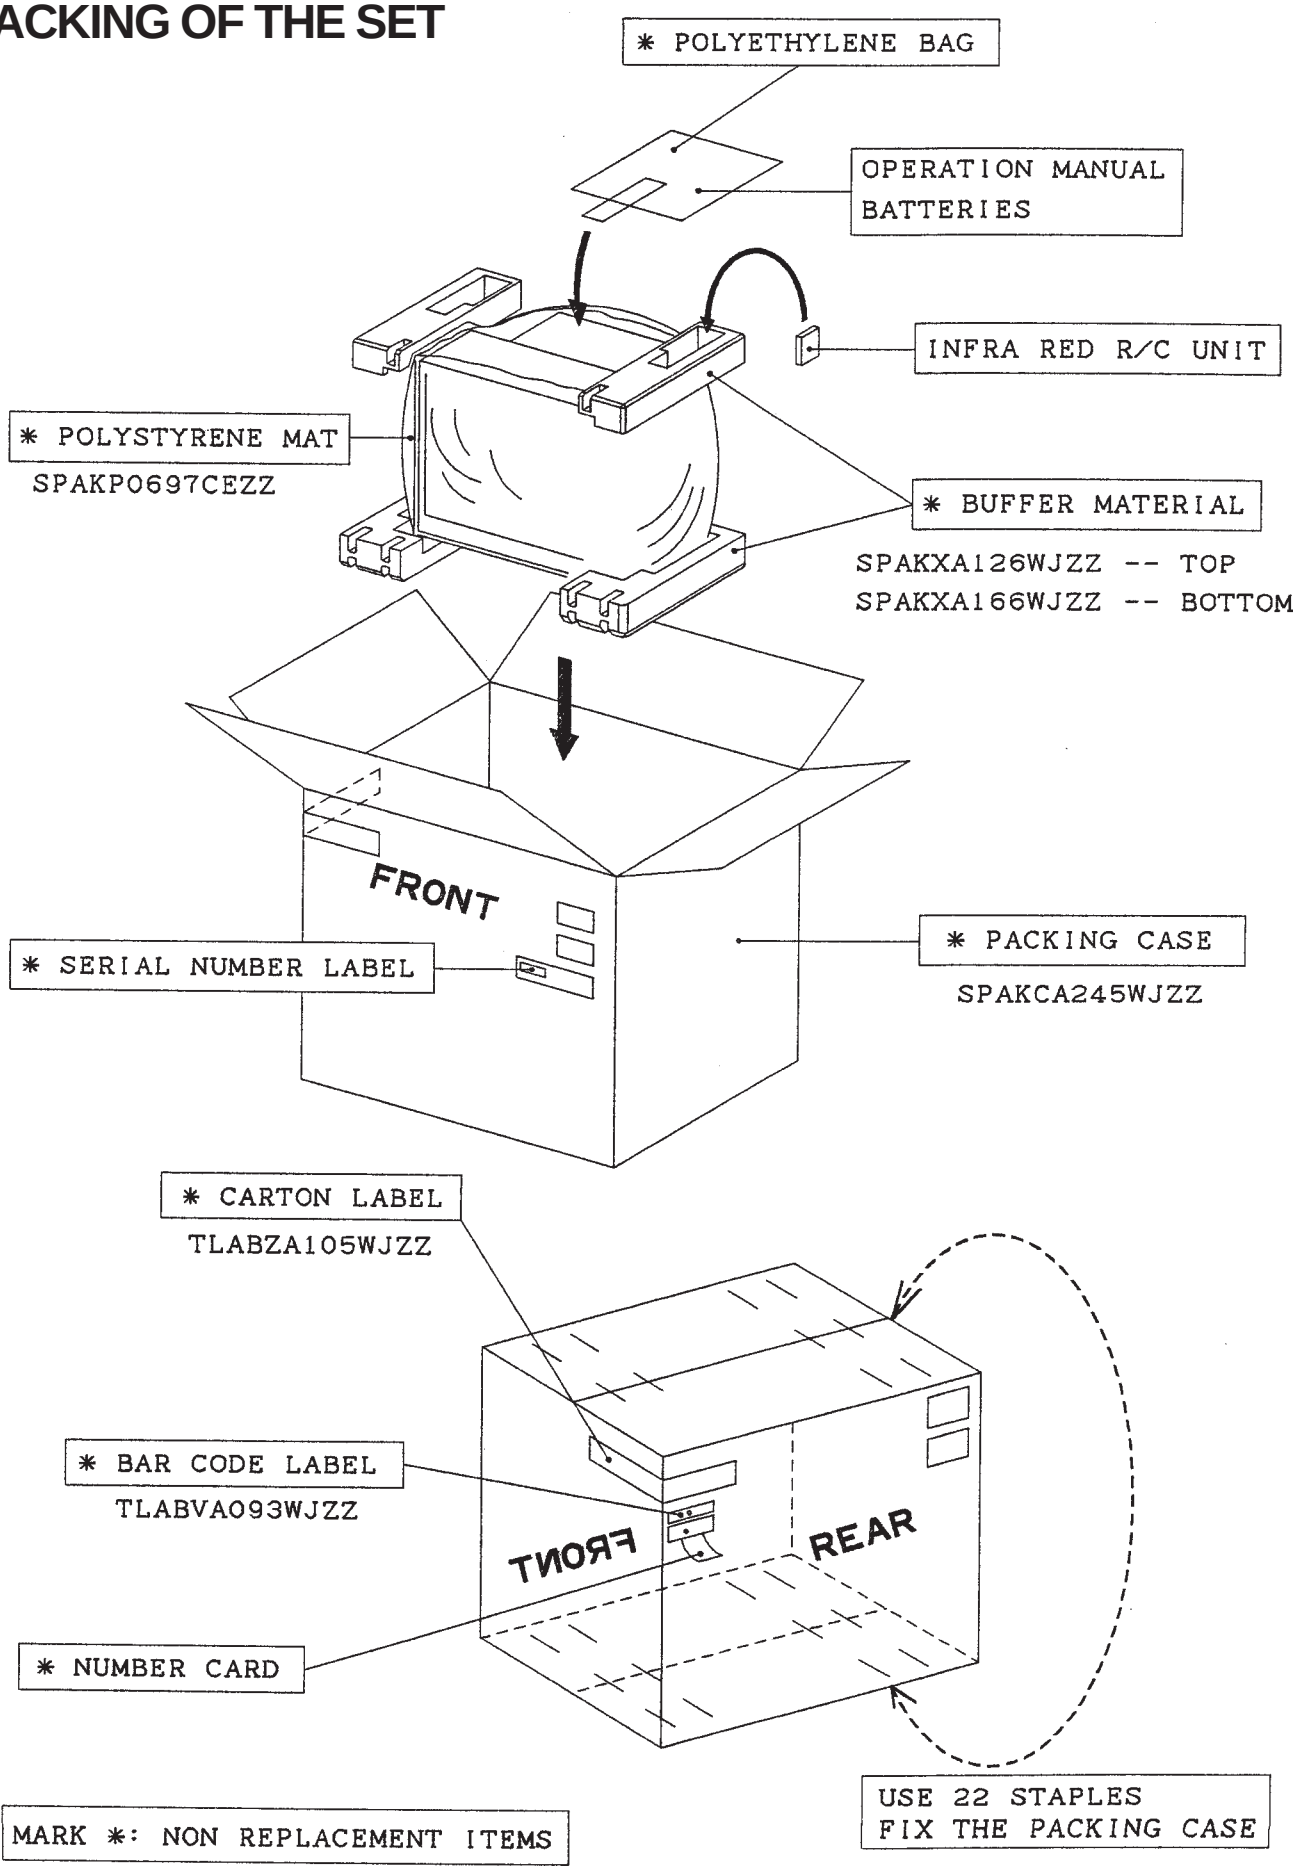

- M E M O -

SHARP

COPYRIGHT © 2002 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

TQ1457-S
Dec. 2002 Printed in Japan
In Japan gedruckt

Design and Production Information	
Design	: SEM
Production	: STTM

MY. DS

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages